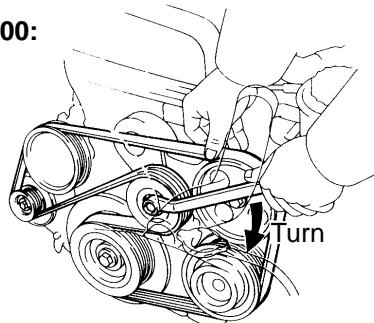
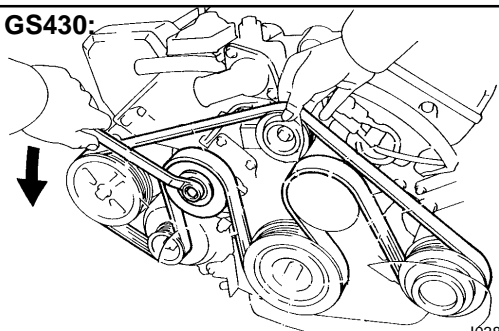


GS300:

I03854

REMOVAL**1. GS 300:
REMOVE DRIVE BELT**

Loosen the drive belt tension by turning the drive belt tensioner clockwise and remove the drive belt.

GS430:

I03855

**2. GS 430:
REMOVE DRIVE BELT**

Loosen the drive belt tension by turning the drive belt tensioner counterclockwise and remove the drive belt.