


ENGINE COOLANT TEMPERATURE (ECT) SWITCH REMOVAL

AC0XX-01

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT FROM RADIATOR

HINT:

It is not necessary to drain out all coolant

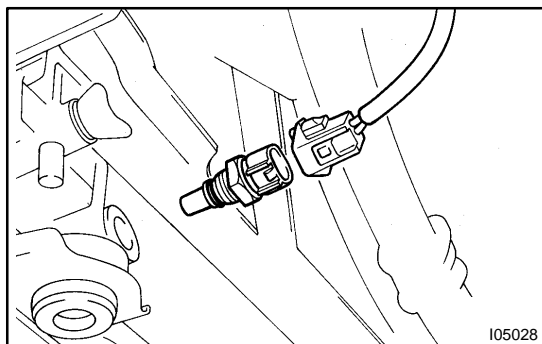

3. REMOVE ECT SWITCH

- (a) Disconnect the connector.
- (b) Remove the ECT switch.

Torque: 7.4 N·m (75 kgf·cm, 65 in.-lbf)

- (c) Remove the O-ring from ECT switch.

HINT:

At the time of installation, please refer to the following item.
Lubricate a new O-ring with soapy water and install the switch.