

## REMOVAL

### 1. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

#### HINT:

At the time of installation, please refer to the following item.


Evacuate air from refrigeration system.

Charge system with refrigerant and inspect for leakage of refrigerant.

**Specified amount: 600 ± 50 g (21.16 ± 1.76 oz.)**

### 2. REMOVE INSTRUMENT PANEL

(See page [BO-91](#))

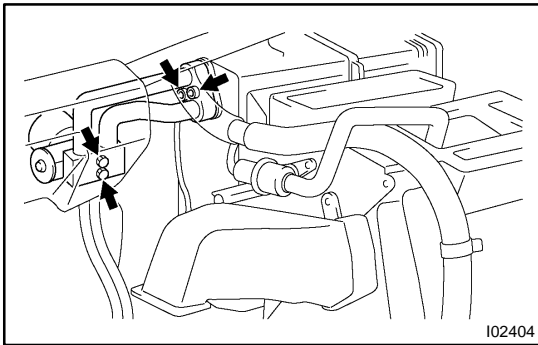

### 3. REMOVE EXPANSION VALVE

#### (a) Pry out the packings.

#### HINT:

At the in time of installation, please refer to the following item.

Do not reuse the packing.

#### (b) Using SST, remove the 4 bolts and separate the expansion valve and tube and accessory.

SST 07110-61050

**Torque: 4.1 N·m (42 kgf·cm, 36 in.-lbf)**

#### NOTICE:

**Cap the open fittings immediately to keep moisture or dirt out of the system.**

#### HINT:

At the in time of installation, please refer to the following item.

Lubricate 6 new O-rings with compressor oil and install them to the tube and valve.