


HEATER RADIATOR REMOVAL

AC0X5-01

1. REMOVE A/C UNIT (See page [AC-24](#))

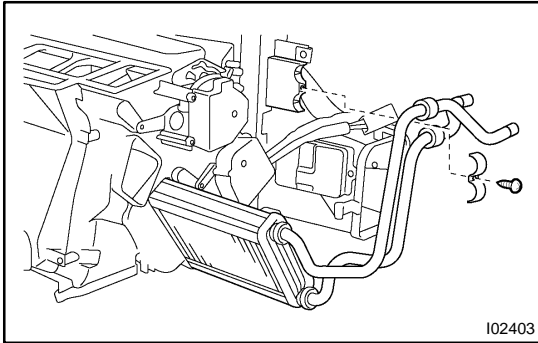

2. REMOVE HEATER RADIATOR

- (a) Remove the screw and clamp.
- (b) Pull out the heater radiator.