


RELAY INSPECTION

AC0XQ-01

1. INSPECT HEATER MAIN RELAY (Marking: HTR) CONTINUITY

Condition	Tester connection	Specified condition
Constant	2 – 4 1 – 3	Continuity
Apply B+ between terminals 1 and 3.	5 – 4	Continuity


If continuity is not as specified, replace the relay.

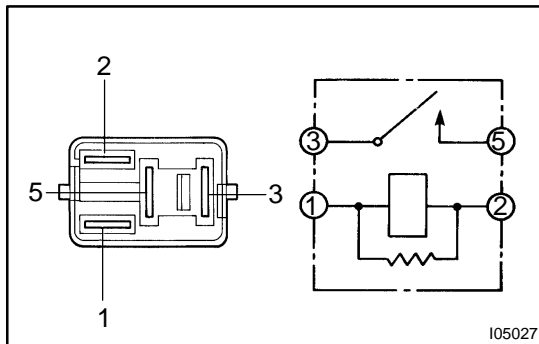

2. INSPECT MAGNETIC CLUTCH RELAY (Marking: A/C COMP) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

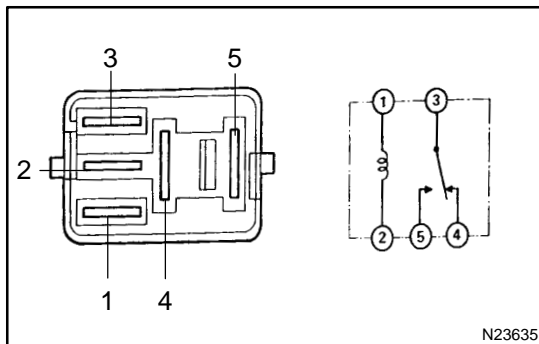

3. INSPECT No.2 COOLING FAN RELAY (Marking: FAN NO.2) CONTINUITY

Condition	Tester connection	Specified condition
Constant	1 – 2 3 – 4	Continuity
Apply B+ between terminals 1 and 2.	3 – 5	Continuity

If continuity is not as specified, replace the relay.

4. INSPECT No.3 COOLING FAN RELAY (Marking: FAN NO.3) CONTINUITY

Check the relay in the same way as for "MAGNETIC CLUTCH RELAY".