

INSPECTION

1. **INSPECT SOLAR SENSOR CIRCUIT**
Driver Side: (See page [DI-1333](#))
Passnger Side: (See page [DI-1324](#))
2. **INSPECT ROOM TEMPERATURE SENSOR CIRCUIT**
(See page [DI-1311](#))
3. **INSPECT AMBIENT TEMPERATURE SENSOR CIRCUIT**
(See page [DI-1314](#))
4. **INSPECT EVAPORATOR TEMPERATURE SENSOR**
(See page [DI-1318](#))
5. **INSPECT SMOG VENTILATION SENSOR CIRCUIT**
(See page [DI-1333](#))