

SENSOR REMOVAL


AC0XK-01

1. REMOVE SOLAR SENSOR

Using a screw driver, pull out the sensor and disconnect the connector.

HINT:


- Tape the screwdriver tip before use.
- At the time of installation, please refer to the following item.
Insert the sensor to instrument panel as shown in the illustration.

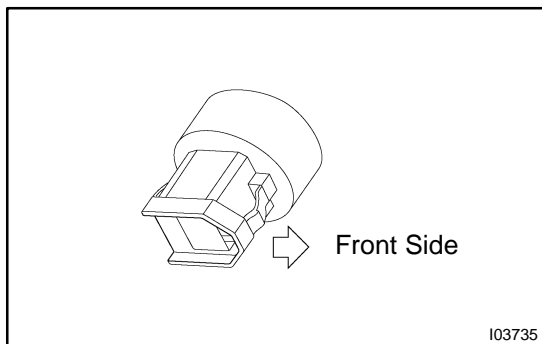


2. REMOVE ROOM TEMPERATURE SENSOR

(a) Remove the No. 1 under cover.

(See page [BO-91](#))

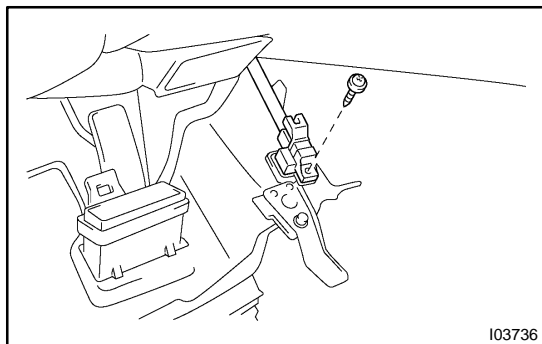

- (b) Remove the room temperature sensor.
- (1) Remove the No.1 safety pad set bolts and screws.
 - (2) Disconnect the connector and aspirator hose.
 - (3) Remove the screw and sensor.

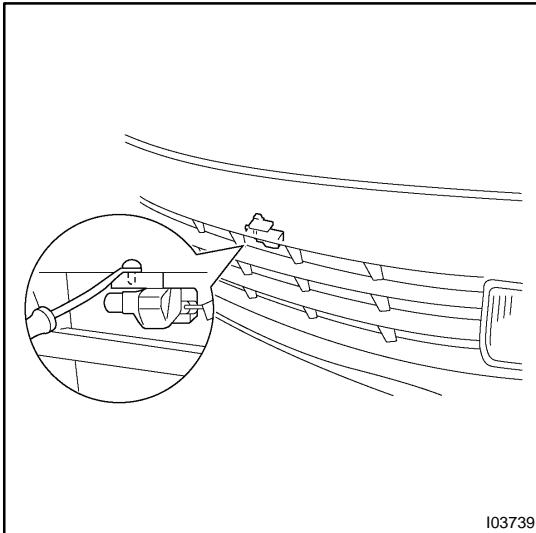


3. REMOVE AMBIENT TEMPERATURE SENSOR

- (a) Disconnect the connector.
- (b) Using a clip remover, pull out the sensor from bumper reinforcement.


4. REMOVE EVAPORATOR TEMPERATURE SENSOR

- (a) Remove these parts:
 - (1) No.1 under cover
 - (2) No.1 safety pad
(See page [BO-91](#))
- (b) Remove the evaporator temperature sensor.
 - (1) Using a screwdriver, pull out the sensor with bracket plate.

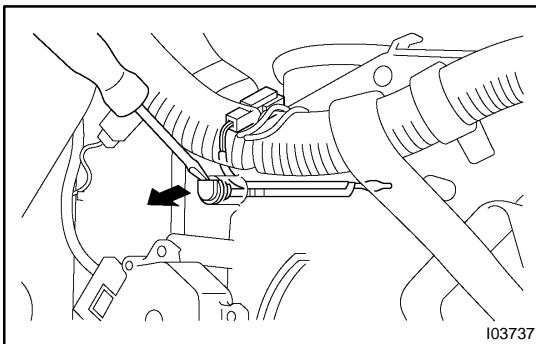


HINT:

Tape the screwdriver tip before use.

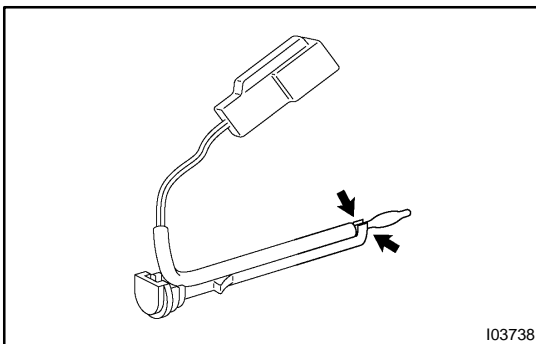

- (2) Release the 2 claws and remove the sensor from bracket plate.

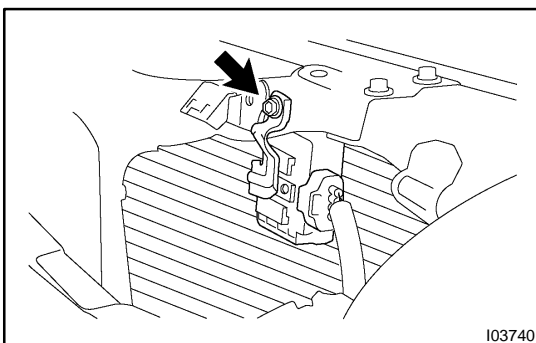

5. REMOVE SMOG VENTILATION SENSOR

- (a) Disconnect the connector.
- (b) Remove the bolt and sensor.