

INSPECTION

1. INSPECT AIR INLET DAMPER POSITION SENSOR CIRCUIT
(See page [DI-1339](#))
2. INSPECT AIR INLET SERVOMOTOR OPERATION
(See page [DI-1351](#))
3. INSPECT AIR MIX DAMPER POSITION SENSOR CIRCUIT
(See page [DI-1336](#))
4. INSPECT AIR MIX SERVOMOTOR OPERATION
(See page [DI-1348](#))
5. INSPECT AIR OUTLET DAMPER POSITION SENSOR CIRCUIT
(See page [DI-1342](#))
6. INSPECT AIR OUTLET SERVOMOTOR OPERATION
(See page [DI-1354](#))