



## INSTALLATION

### 1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure from the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

**Correct distance: More than 0.1 mm (0.004 in.)**

If the distance is less than the standard, check for an improper installation.

### 2. INSTALL TRANSMISSION

Installation is in the reverse order of removal  
(See page [AT-33](#)).

HINT:

After installation, check and inspect items as follows.

- Adjust the shift lever position (See page [DI-346](#)).
- Fill ATF and check fluid level (See page [DI-346](#)).
- Do the road test (See page [DI-346](#)).