

INSTALLATION

Installation is in the reverse order of removal (See page [AT-20](#)).

HINT:

After installation, inspect the shift lever position.

- When shifting from P to R position only with ignition switch ON and brake pedal, make sure that the shifting lever moves smoothly and can be moderately operated.
- When starting engine, make sure that the vehicle moves forward when shifting from N to D position and moves rearward when shifting to R position.