


## O/D DIRECT CLUTCH SPEED SENSOR

ATOXW-03

### ON-VEHICLE REPAIR

1. **3UZ-FE Engine only:**  
**REMOVE FRONT EXHAUST PIPE (See page EM-119)**

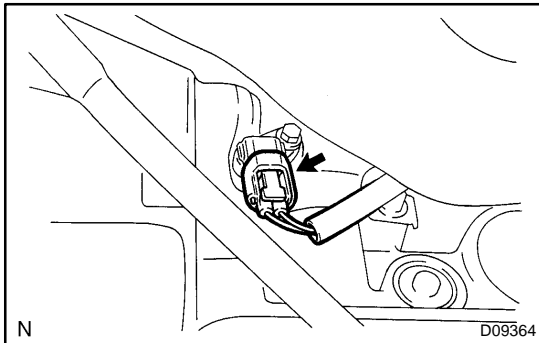

2. **DISCONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR**
3. **REMOVE O/D DIRECT CLUTCH SPEED SENSOR**
  - (a) Remove the bolt and O/D direct clutch speed sensor.
  - (b) Remove the O-ring from the O/D direct clutch speed sensor.
4. **INSTALL O/D DIRECT CLUTCH SPEED SENSOR**
  - (a) Coat a new O-ring with ATF and install it to the O/D direct clutch speed sensor.
  - (b) Install the O/D direct clutch speed sensor to the transmission case and torque the bolt.  
**Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)**
5. **CONNECT O/D DIRECT CLUTCH SPEED SENSOR CONNECTOR**
6. **3UZ-FE Engine only:**  
**INSTALL FRONT EXHAUST PIPE (See page EM-119)**