

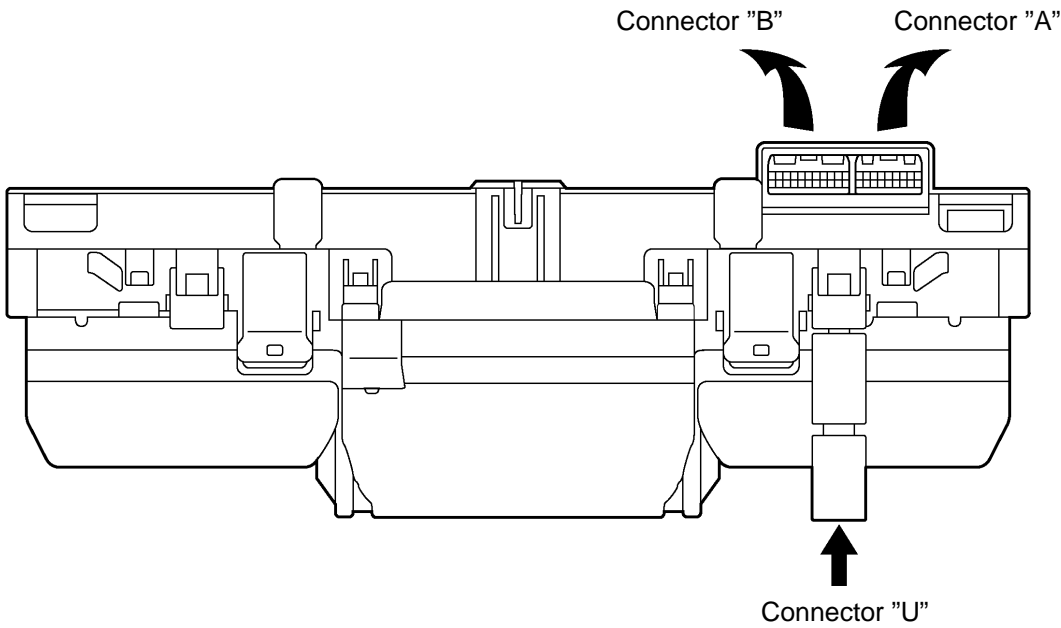


CIRCUIT

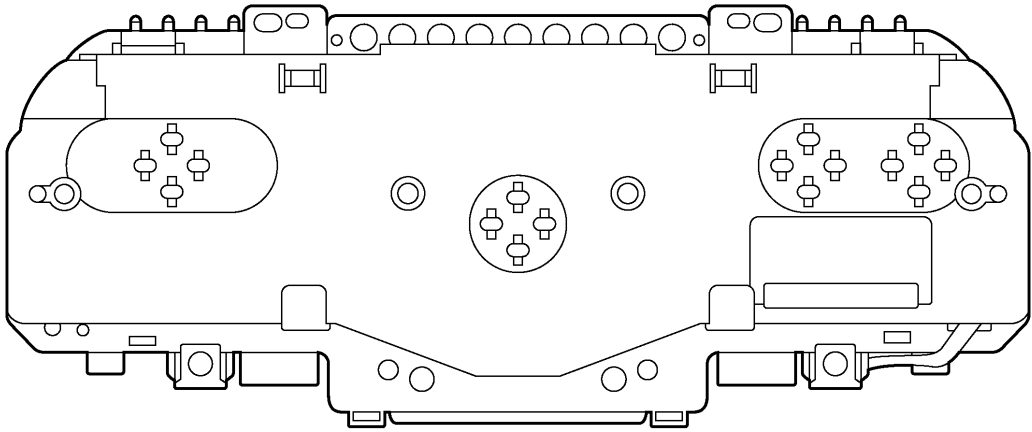


Combination Meter Wiring Circuit Connectors


Connector "B"

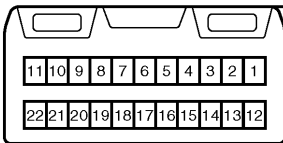

Connector "A"

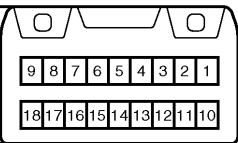


Connector "U"

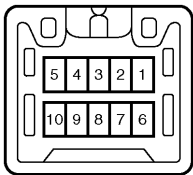

ECM (GS430)
Ignitor (GS300)








• Combination Meter Wiring Circuit - 2






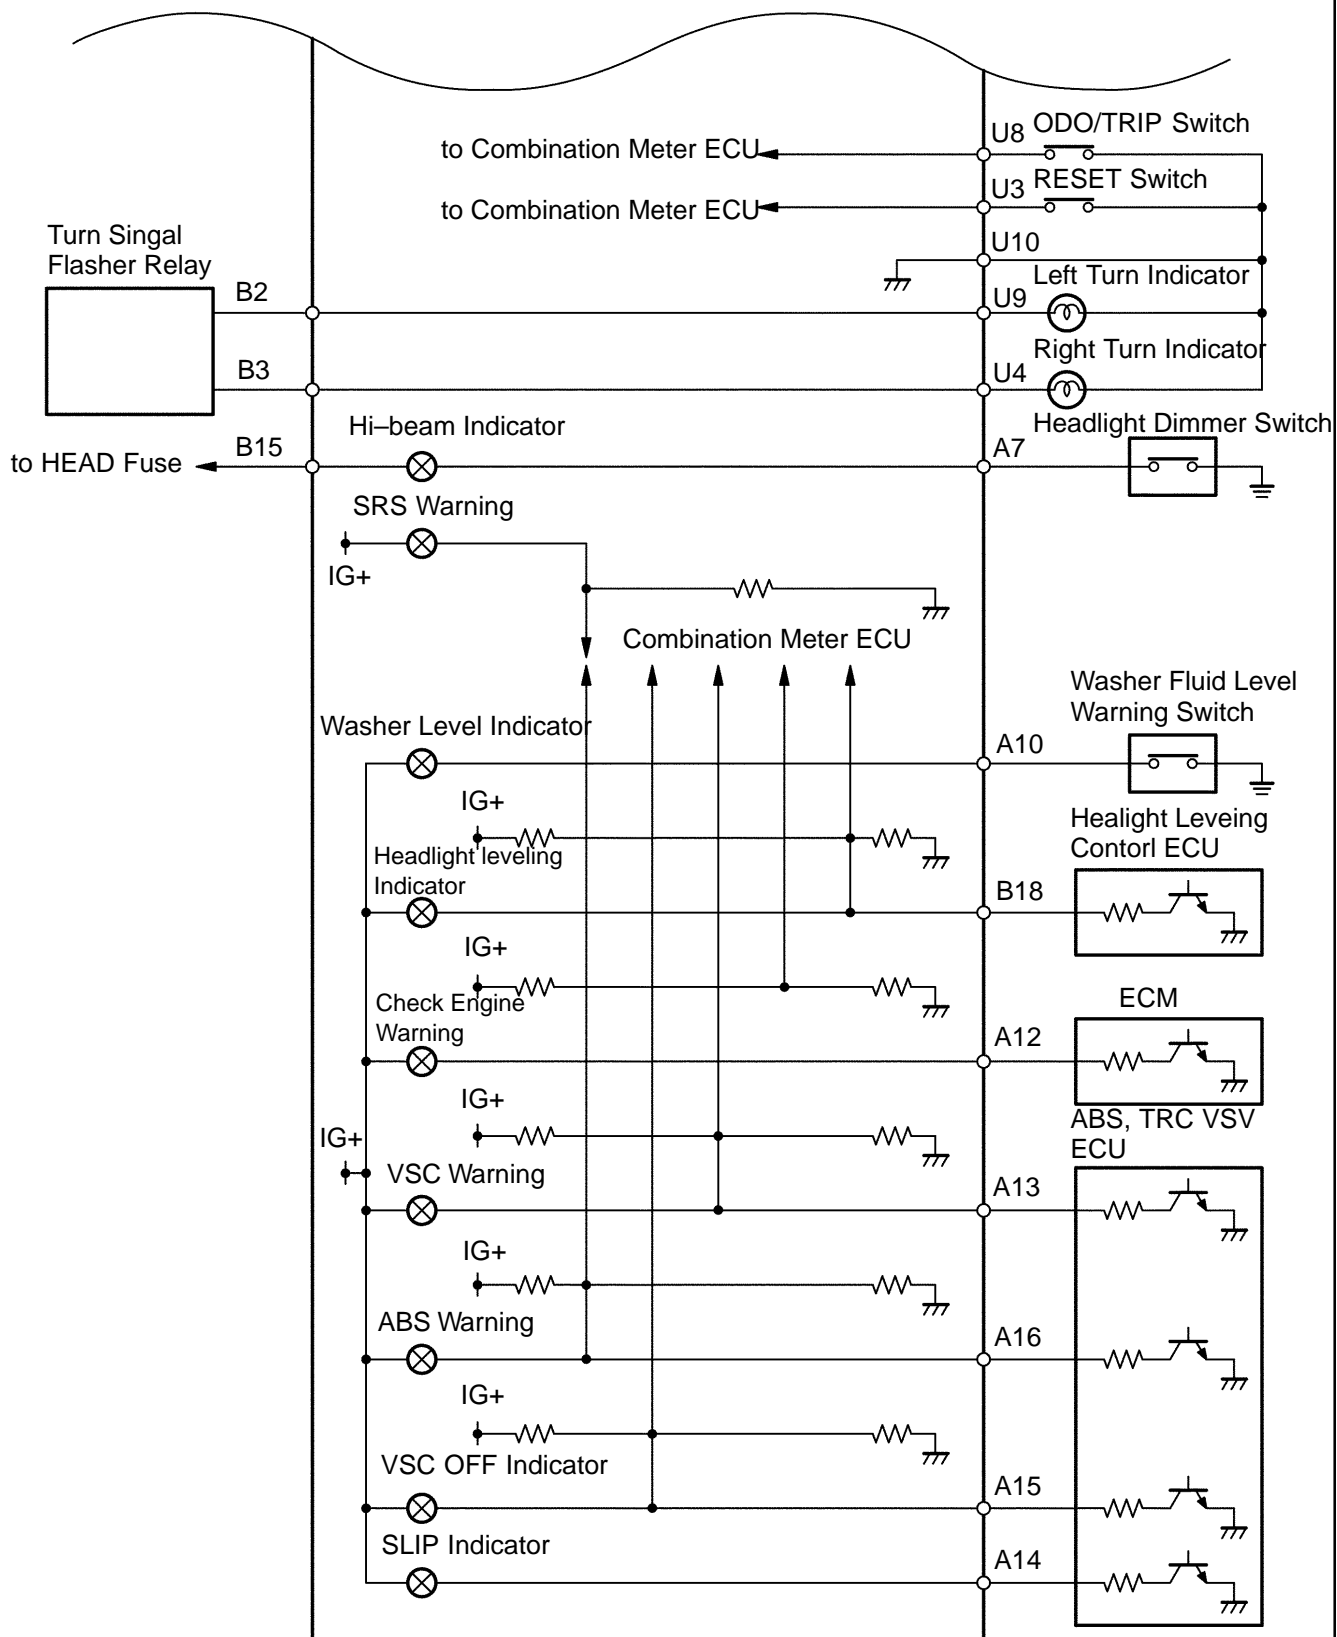


No.		Wiring connector side
A	1	Clock (Passenger seat belt warning light)
	2	Airbag Sensor Assembly
	3	Fuel main sender gauge
	4	Fuel sub sender gauge
	5	ABS, TRAC and VSC ECU (Speed signal)
	6	Speed control unit
	7	Headlight dimmer switch
	8	Ground
	10	Window washer level warning switch
	11	Body control No.2 ECU
	12	ECM
	13	ABS, TRAC and VSC ECU (VSC warning light)
	14	ABS, TRAC and VSC ECU (SLIP warning light)
	15	ABS, TRAC and VSC ECU (TRAC OFF warning light)
	16	ABS, TRAC and VSC ECU (ABS warning light)
	17	ABS, TRAC and VSC ECU (Brake warning light)
B	1	GAUGE fuse
	2	Turn signal flasher (Left turn side)
	3	Turn signal flasher (Right turn side)
	4	Light control rheostat (+B)
	5	Light control rheostat (Signal)
	6	Light control rheostat (Ground)
	9	PANEL fuse
	12	MPX+B fuse
	13	DOME+B fuse
	14	HEAD–RH fuse
	15	Igniter
	16	Headlight beam leveling control ECU
	17	Ground
U	1	Telltale light assembly (IG+)
	3	Telltale light assembly (ODO/TRIP switch)
	4	Telltale light assembly (Right turn signal)
	8	Telltale light assembly (RESET switch)
	9	Telltale light assembly (Left turn signal)
	10	Ground


● Combination Meter ECU Plate

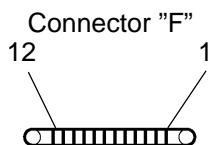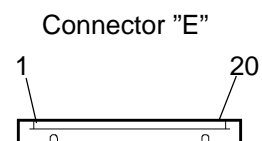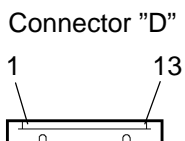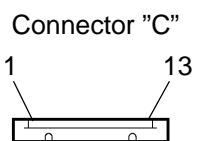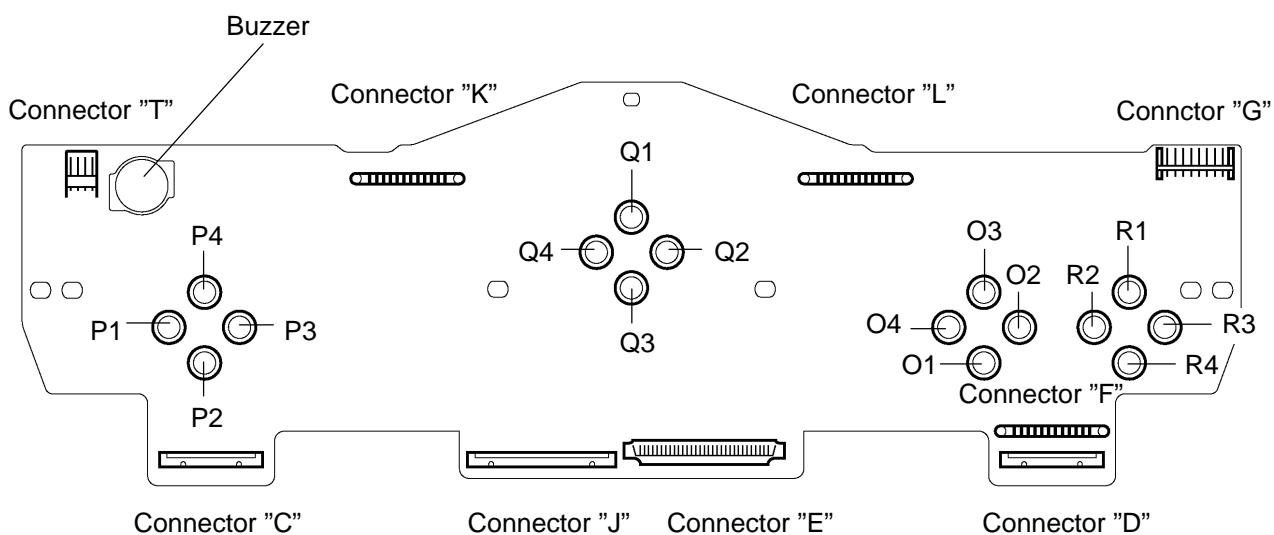

Connector "G"

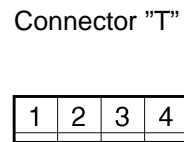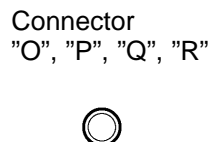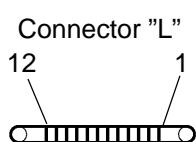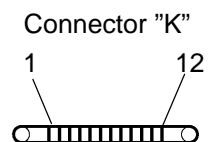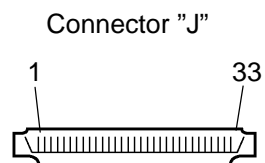 


• Meter Circuit Plate - 1

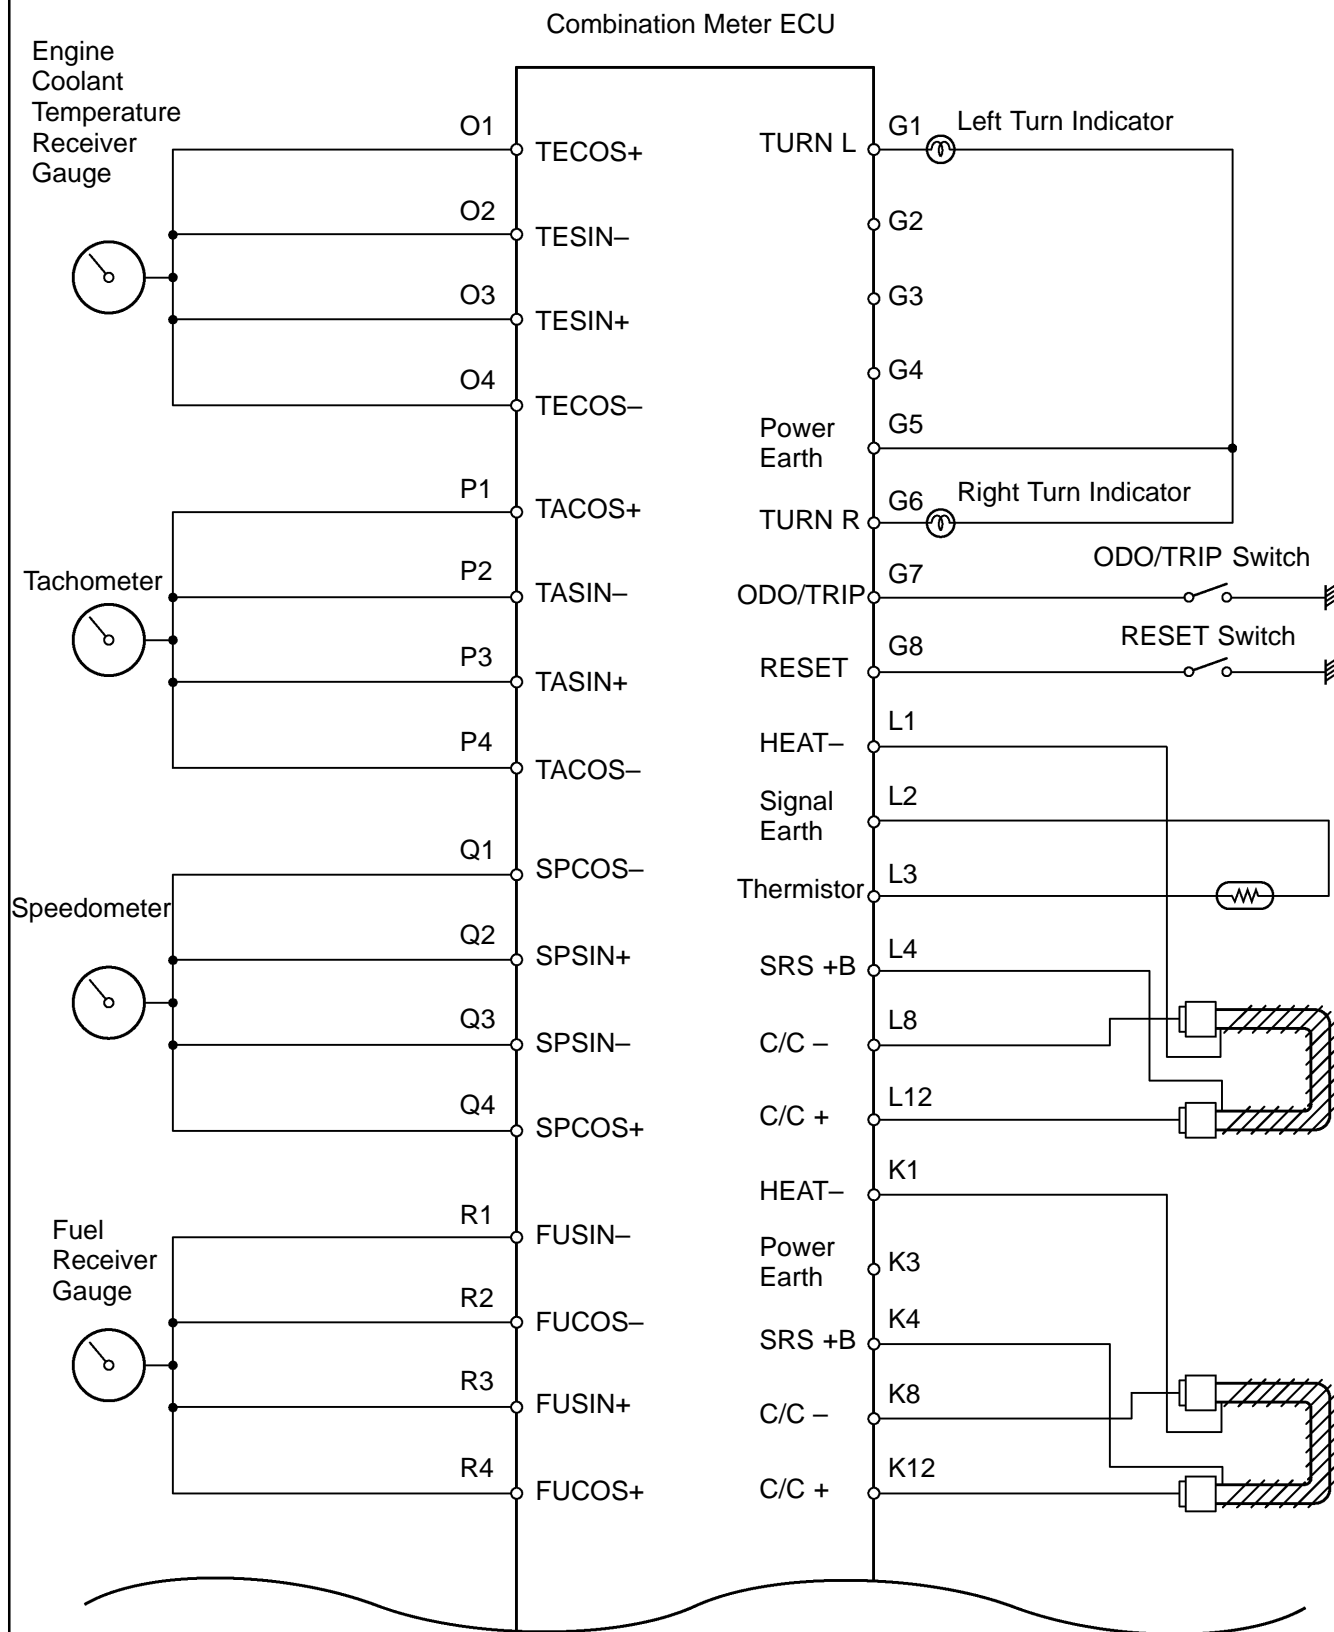

I04252

● Meter Circuit Plate – 2

Combination Meter ECU

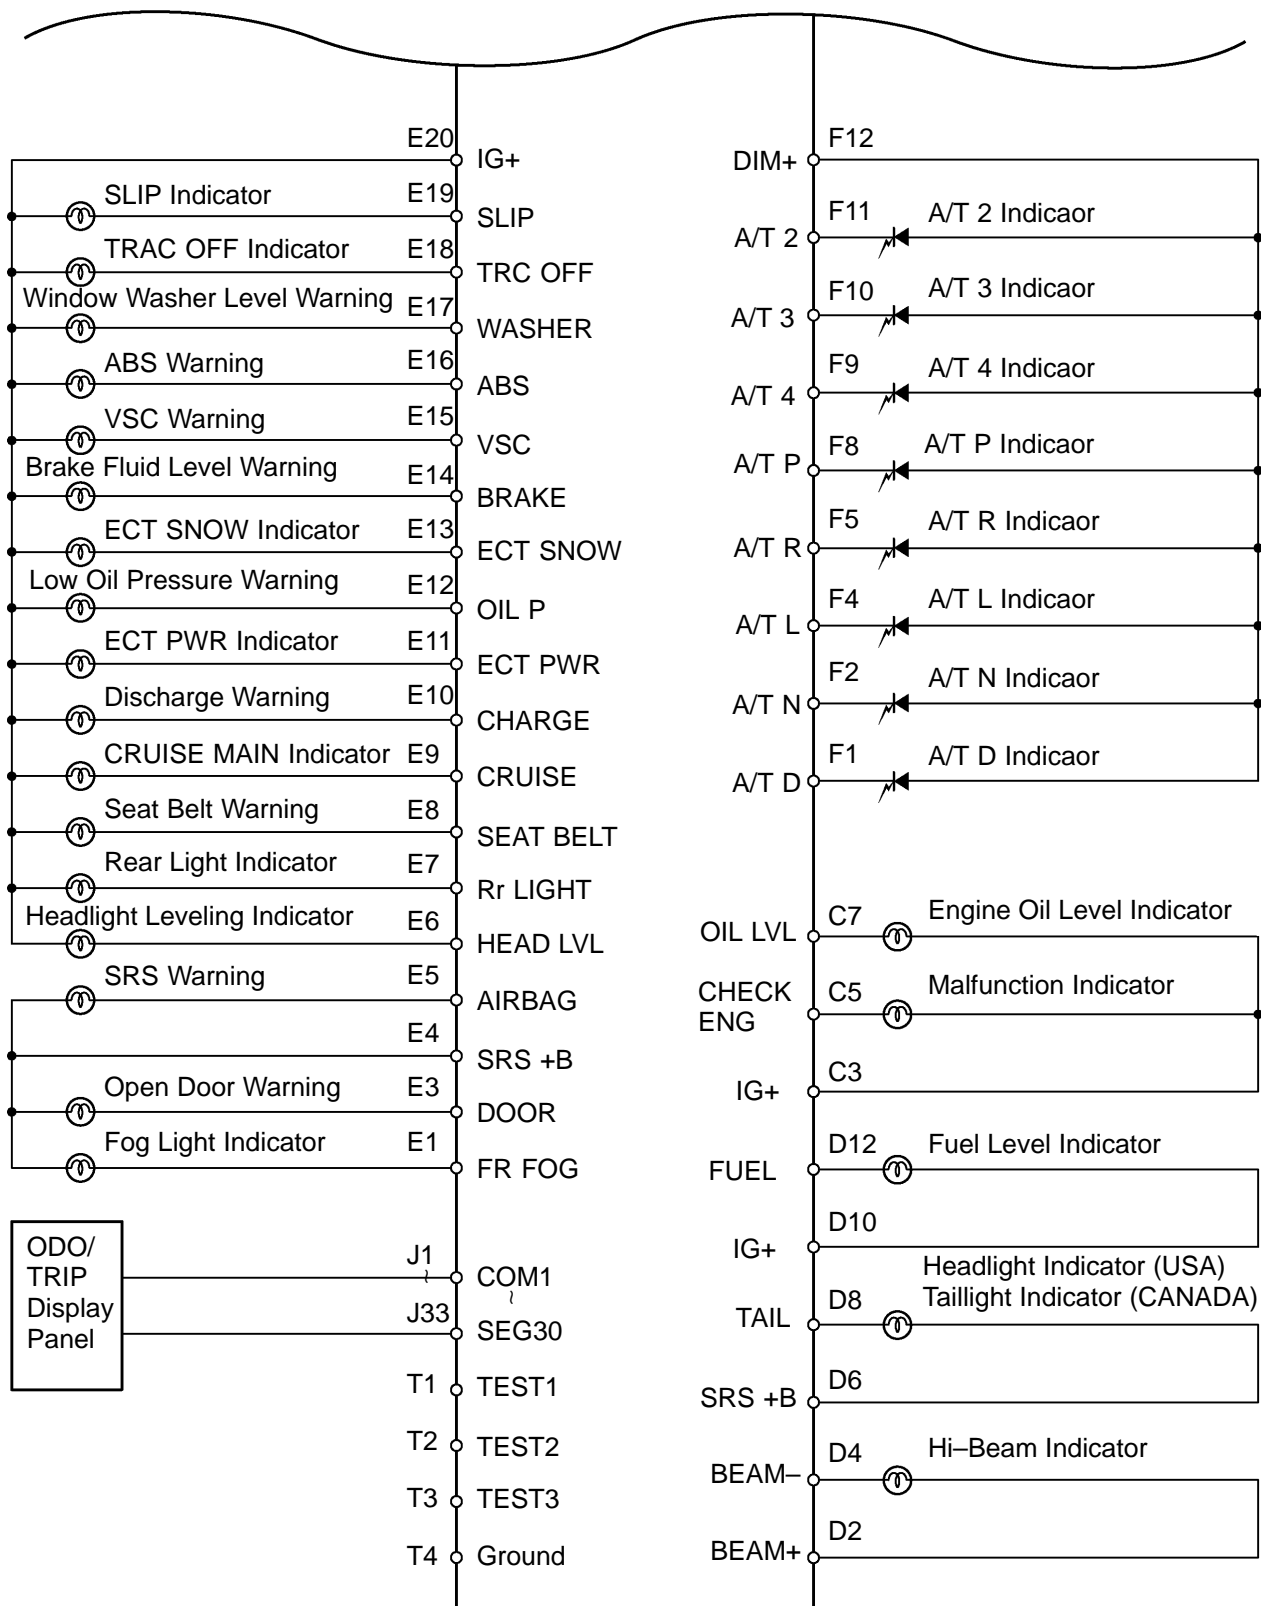

I04253