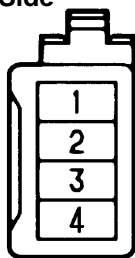


**Wire Harness Side**

I04048

**INSPECTION****INSPECT INNER MIRROR (Compass) CIRCUIT**

Disconnect the connector from the mirror and inspect the connector on the wire harness side, as shown.

Tester connection	Condition	Specified condition
4 – Ground	Constant	Continuity
1 – Ground	Ignition switch LOCK or ACC	No voltage
1 – Ground	Ignition switch ON	Battery positive voltage

If circuit is not as specified, inspect the circuits connected to other parts.