

INSPECTION


1. INSPECT THEFT DETERRENT INDICATOR LIGHT OPERATION

Connect the positive (+) lead from the battery terminal 2 and negative (–) lead to terminal 5, and check that the warning light lights up.

If operation is not as specified, replace the light control rheostat.

2. INSPECT THEFT DETERRENT INDICATOR LIGHT CIRCUIT

(See page [DI-959](#))

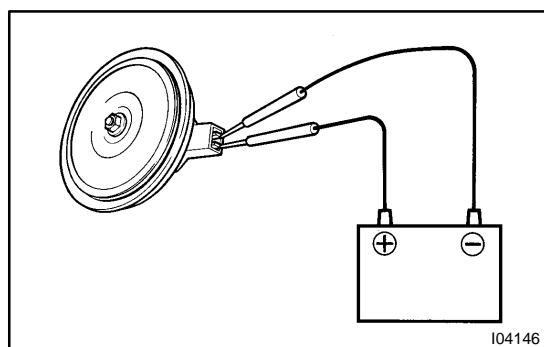


3. INSPECT THEFT DETERRENT HORN OPERATION

Connect the positive (+) lead from the battery to the terminal 1 and negative (–) lead to theft deterrent horn body, and check that the theft deterrent horn blows.

If operation is not as specified, replace the horn.

4. INSPECT THEFT DETERRENT HORN CIRCUIT

(See page [DI-955](#))

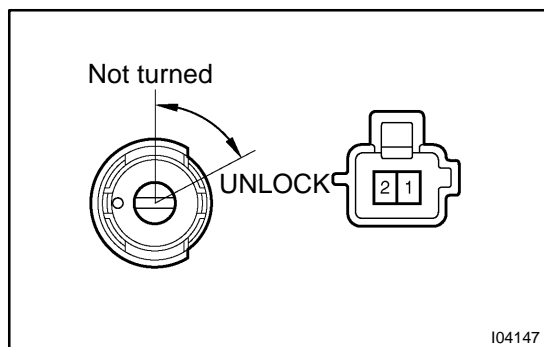


5. INSPECT LUGGAGE COMPARTMENT DOOR KEY LOCK AND UNLOCK SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
Not turned	–	No continuity
UNLOCK	1 – 2	Continuity

If continuity is not as specified, replace the switch.

6. INSPECT LUGGAGE COMPARTMENT DOOR KEY LOCK AND UNLOCK SWITCH CIRCUIT

(See page [DI-945](#))

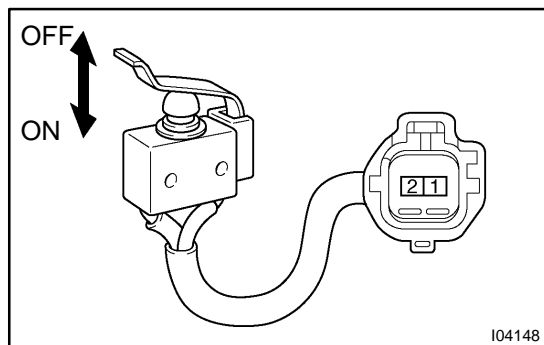

7. INSPECT ENGINE HOOD COURTESY SWITCH CONTINUITY

Switch position	Tester connection	Specified condition
LOCK	–	No continuity
UNLOCK	1 – 2	Continuity

If continuity is not as specified, replace the switch.

8. INSPECT ENGINE HOOD COURTESY SWITCH CIRCUIT

(See page [DI-941](#))