



## REMOVAL

1. REMOVE FRONT SEAT (See page [BO-109](#))
2. REMOVE REAR SEAT (See page [BO-119](#))
3. REMOVE FRONT AND REAR DOOR SCUFF PLATE
4. REMOVE CENTER PILLAR LOWER GARNISH

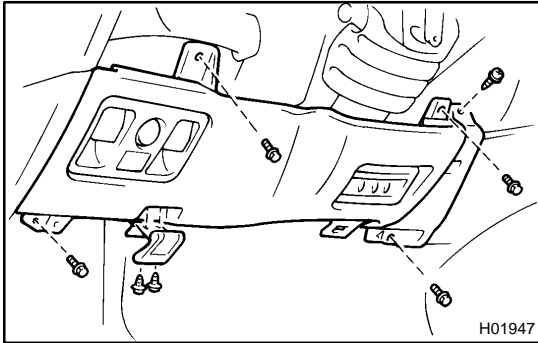

### 5. REMOVE THESE PARTS:

- (a) End pad
- (b) No. 1 under cover
- (c) No. 1 safety pad

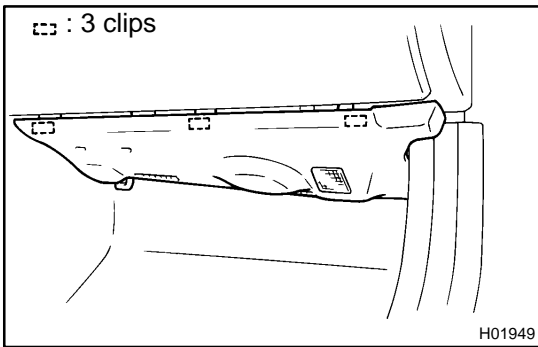

### 6. REMOVE No. 2 UNDER COVER


Using a screwdriver, remove the pad.

HINT:

Tape the screwdriver tip before use.


### 7. REMOVE THESE PARTS:

- (a) Glove Compartment Panel Assembly
- (b) Front ash receptacle
- (c) Cluster finish panel
- (d) Lower Rear console box
- (e) Rear console armrest

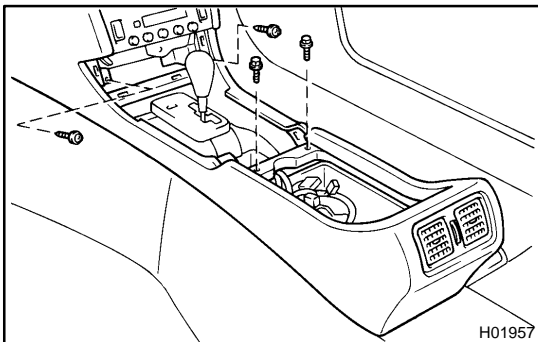

### 8. REMOVE CONSOLE BOX

- (a) Remove the 2 screws.
- (b) Remove the 2 bolts.
- (c) Remove the console box.

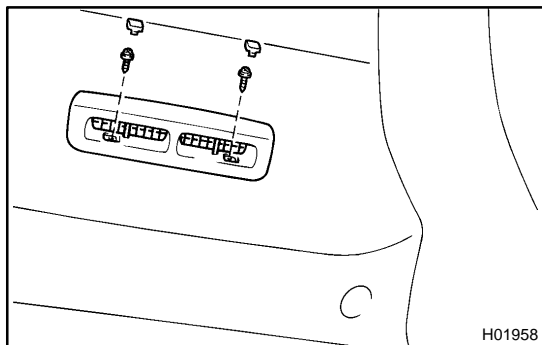**9. REMOVE AIR DUCT**

- (a) Remove the 2 covers.
- (b) Remove the 2 screws.
- (c) Remove the air duct.

**10. REMOVE FLOOR CARPET**

- (a) Remove the clips.
- (b) Remove the floor carpet.