


INSTALLATION

1. INSTALL WASHER NOZZLE

2. INSTALL WIPER MOTOR

Install the wiper motor with the 2 screws to the wipe link.

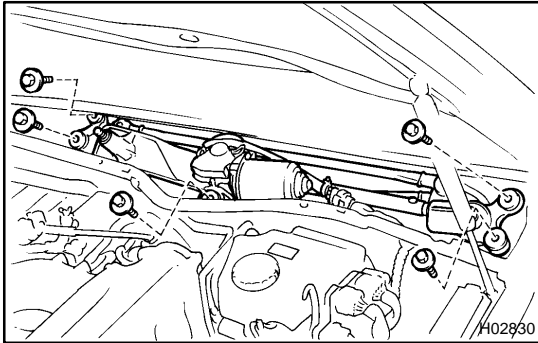

3. INSTALL WIPER LINK ASSEMBLY


- (a) Install the wiper link assembly with the 5 bolts to the body.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- (b) Connect the connector.

4. INSTALL THESE PARTS:

- (a) Cowl Louver
(b) Weatherstrip

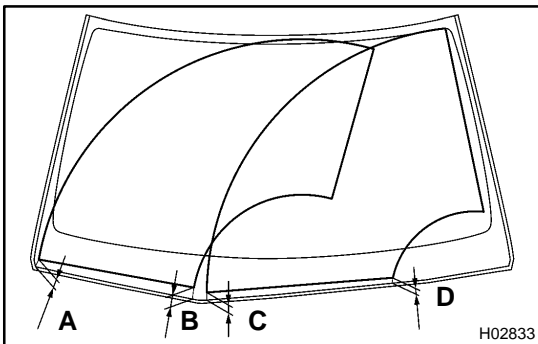

5. INSTALL WIPER ARMS

- (a) Install the wiper arms and tighten the nuts by hand. Operate the wipers once and turn the wiper switch OFF.

- (b) Adjust the installation positions of the wiper arms to the positions as shown in the illustration.

A: Approx. 29.0 mm (1.142 in.)

B: Approx. 38.5 mm (1.516 in.)

C: Approx. 25.0 mm (0.984 in.)

D: Approx. 17 mm (0.669 in.)

- (c) Torque the 2 nuts.

Torque: 22 N·m (220 kgf·cm, 16 ft-lbf)