


## INSTALLATION

### 1. BEFORE INSTALLING PARTS, COAT LOCK WITH MP GREASE

Apply Mp grease to the sliding surface of the lock.

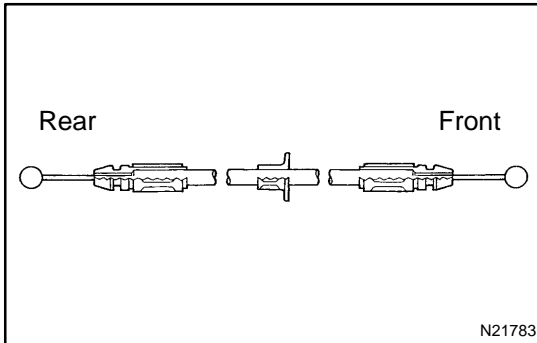

### 2. INSTALL HOOD LOCK CONTROL CABLE

- Push the rear side cable through the grommet.
- Using a screwdriver, push the cable stopper into the grommet.

#### HINT:

- tape the screwdriver tip before use.
  - Do not damage the grommet with the screwdriver.
- Pass the front side cable through the upper radiator support.
  - Install the cable with clamps.

### 3. INSTALL HOOD RELEASE LEVER

### 4. CHECK HOOD LOCK CONTROL FOR PROPER OPERATION

After checking for proper operation, tighten the 3 bolts to install the lock.

**Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)**

### 5. INSTALL THESE PARTS:

- Radiator support upper seal
- LH fender liner
- LH front fender side panel protector