

ADJUSTMENT


1. ADJUST LUGGAGE COMPARTMENT DOOR

- (a) Using a clip remover, remove the clips and luggage compartment door trim.
- (b) For forward / rearward and left / right adjustments loosen the bolts.
- (c) For vertical adjustment of front end of the door, increase or decrease the number of washers between the hinge and the door.

Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)

2. ADJUST DOOR LOCK STRIKER


- (a) Remove the 2 bolts and 2 hooks.

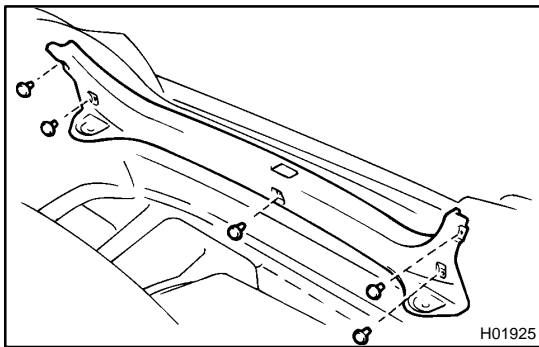

- (b) Using a clip remover, remove the 5 clips.
- (c) Using a screwdriver, remove the rear floor finish plate.

HINT:

Tape the screwdriver tip before use.

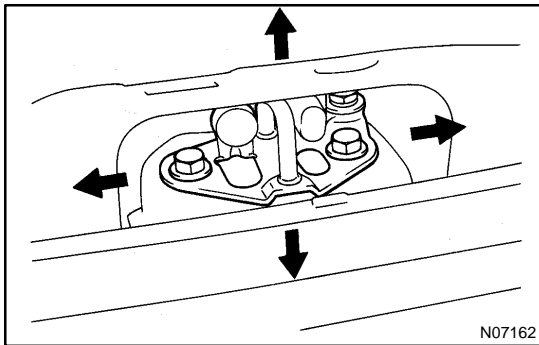

- (d) Using a hammer and brass bar, tap the striker to adjust it.

Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)