

## DISASSEMBLY

### 1. REMOVE DOOR INSIDE HANDLE BEZEL

Using a screwdriver, remove the door inside handle bezel.

HINT:

Tap the screwdriver tip before use.

### 2. REMOVE LUGGAGE COMPARTMENT DOOR TRIM

- (a) Remove the 2 screws and luggage compartment door assist grip.
- (b) Remove the 14 clips and luggage compartment door trim.

### 3. REMOVE DOOR LOCK STRIKER


- (a) Remove the 2 bolts.

**Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

- (b) Remove the door lock striker.

### 4. REMOVE DOOR LOCK KEY CYLINDER

- (a) Remove the 2 bolts.
- (b) Disconnect the connector.
- (c) Disconnect the link and remove the door lock key cylinder.

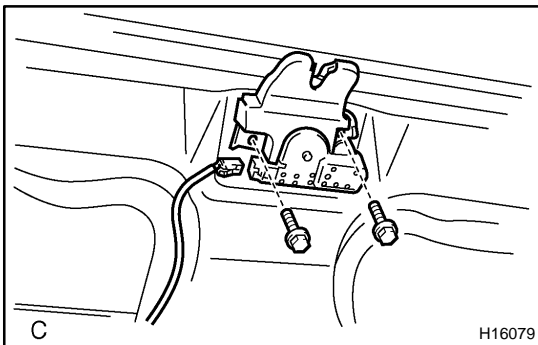

### 5. REMOVE LUGGAGE COMPARTMENT DOOR LOCK

- (a) Disconnect the connector.
  - (b) Remove the 2 bolts and luggage compartment door lock.
- Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)**

### 6. REMOVE REAR LIGHT

### 7. REMOVE LUGGAGE COMPARTMENT DOOR OUTER GARNISH

### 8. REMOVE LICENCE PLATE LIGHT