



REMOVAL

1. REMOVE LUGGAGE COMPARTMENT DOOR HINGE COVERS
2. REMOVE LUGGAGE COMPARTMENT DOOR
 - (a) Disconnect the connector.
 - (b) Using a clip remover, disconnect the clamps.
 - (c) Remove the 4 bolts and door.
Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)
3. REMOVE LUGGAGE COMPARTMENT FLOOR MAT
4. REMOVE REAR FLOOR FINISH PLATE
5. REMOVE LUGGAGE COMPARTMENT TRIM FRONT COVER
6. REMOVE LUGGAGE COMPARTMENT TRIM SIDE COVER LH AND RH
7. REMOVE LUGGAGE COMPARTMENT TRIM NO.1 COVER
8. REMOVE ROOM PARTITION TRIM COVER
9. REMOVE REAR SEAT CUSHION (See page [BO-119](#))
10. REMOVE REAR SEATBACK (See page [BO-119](#))
11. REMOVE SEAT BELTS
12. REMOVE SPEAKER GRILLE
13. REMOVE REAR DOOR SCUFF PLATES
14. REMOVE OPENING TRIMS
15. REMOVE REAR SEAT SIDE GARNISHS

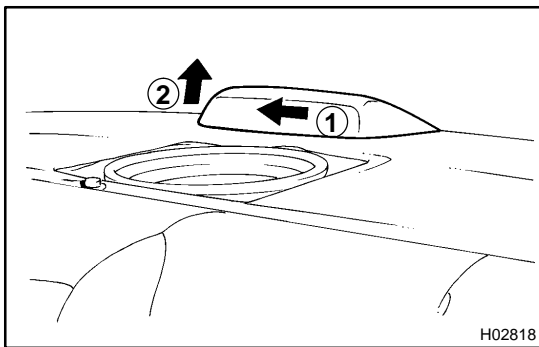

16. w/ High-mounted stop light
REMOVE HIGH-MOUNTED STOP LIGHT

- (a) Slide the light rearward.
- (b) Remove the stop light, then disconnect the connector.

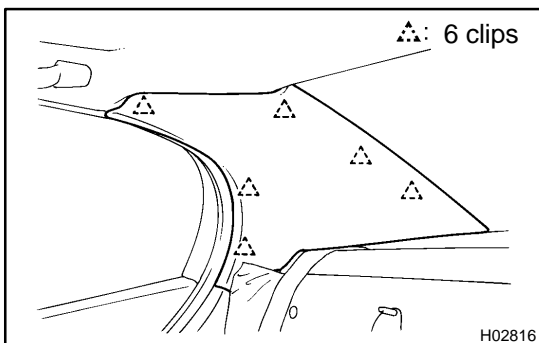

17. REMOVE ROOF SIDE INNER GARNISH

- (a) Remove the roof side inner garnish.

HINT:

Tape the screwdriver tip before use.

- (b) Employ the same manner described above to the other side.

18. REMOVE TETHER ANCHORS


- (a) Using a screw driver, remove the CRS tether anchor covers.

HINT:


Tape the screwdriver tip before use.

- (b) Remove the CRS tether anchors by loosening the bolts.


Torque: 20 N·m (204 kgf·cm, 15 ft·lbf)

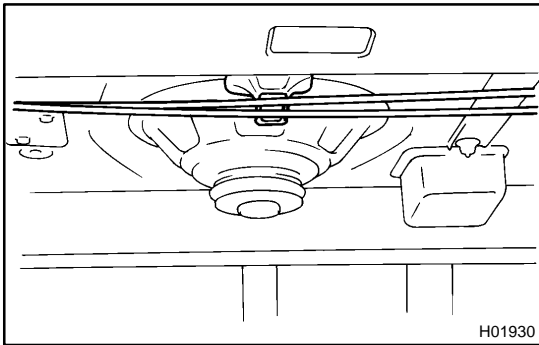19. REMOVE PACKAGE TRAY TRIM**20. REMOVE ROOM PARTITION TRIM****21. REMOVE TORSION BAR**


- (a) Remove the torsion bars from the center bracket.

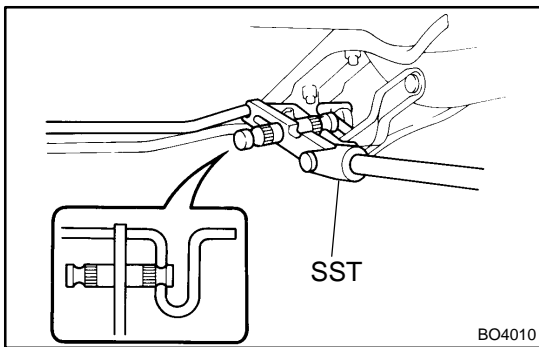


- (b) Install SST to the torsion bar on the hinge side.
SST 09804-24010

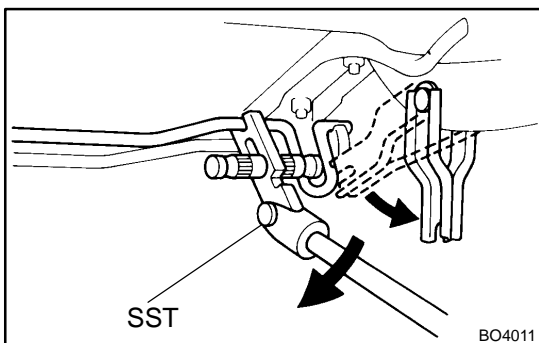


- (c) Push down on SST, and pull the luggage compartment door hinge from the torsion bar.

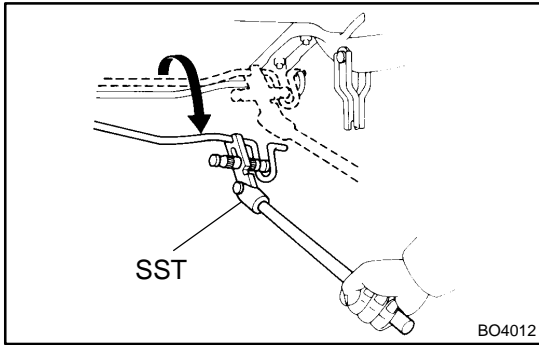

- (d) Slowly lift SST, and remove the torsion bar from the torsion bar bracket with SST.

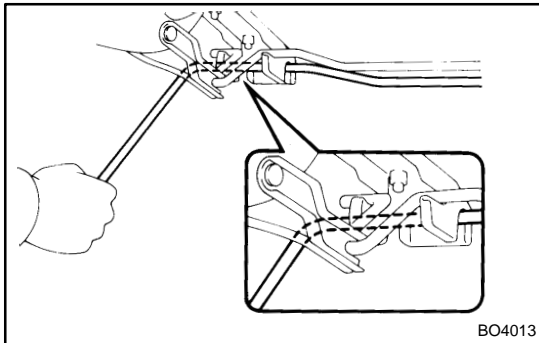

- (e) Disconnect the torsion bar from the bracket.
(f) Do the same for the other side.

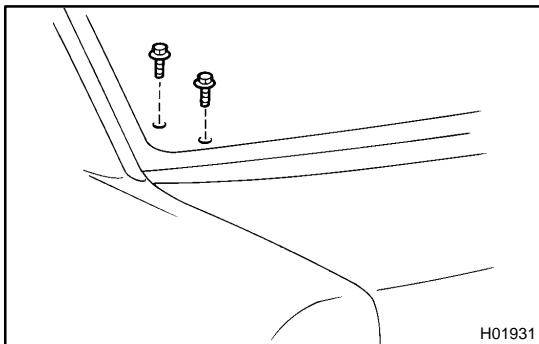

22. REMOVE LUGGAGE COMPARTMENT DOOR HINGE

- (a) Remove the 4 bolts.
(b) Remove the hinge.
Torque: 12.5 N·m (127 kgf·cm, 9 ft·lbf)
(c) Employ the same manner described above to the other side.