

## DISASSEMBLY

### 1. REMOVE HEADREST SUPPORTS

### 2. REMOVE SHOULDER BELT GUIDE

Remove the 6 screws and 3 shoulder belt guides.

### 3. REMOVE CENTER ARMREST

Remove the 2 nuts and center armrest from the seatback assembly.

### 4. REMOVE SEAT CUSHION COVER

Remove the hog rings and seat cushion cover from the seat cushion pad.

### 5. REMOVE SEATBACK COVER

Remove the hog rings and seatback cover from the seatback pad.