

INSTALLATION

NOTICE:

Never use seat belt pretensioner from another vehicle. When replacing parts, replace them with new parts.

1. INSTALL FRONT SEAT OUTER BELT

- (a) Install the front seat belt parts by following the reverse order of removal and torque the following bolts.

(1) Front seat outer belt retractor upper bolt

Torque: 7.5 N·m (76 kgf-cm, 66 in.-lbf)

(2) Front seat outer belt retractor lower bolt

Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

(3) Seat belt shoulder anchor


Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

(4) Seat belt floor anchor

Torque: 42 N·m (430 kgf-cm, 31 ft-lbf)

NOTICE:

- **Make sure that the front seat outer belt is installed with the specified torque.**
- **If the front seat outer belt has been dropped, or there are cracks, dents or other defects in the case or connector, replace the front seat outer belt with a new one.**
- **When installing the front seat outer belt, take care that the wiring does not interfere with other parts and is not pinched between other parts.**

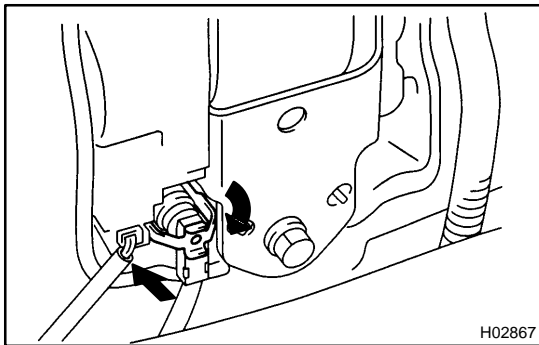

- (b) Connect the connector
- (c) Connect the pretensioner connector as shown in the illustration.
- (d) Connect the retractor switch connector.

2. INSTALL THESE PARTS:

- (a) Center pillar upper garnish
- (b) Center pillar lower garnish
- (c) Rear door opening trim
- (d) Rear door inside scuff plate
- (e) Front door opening trim
- (f) Front door inside scuff plate