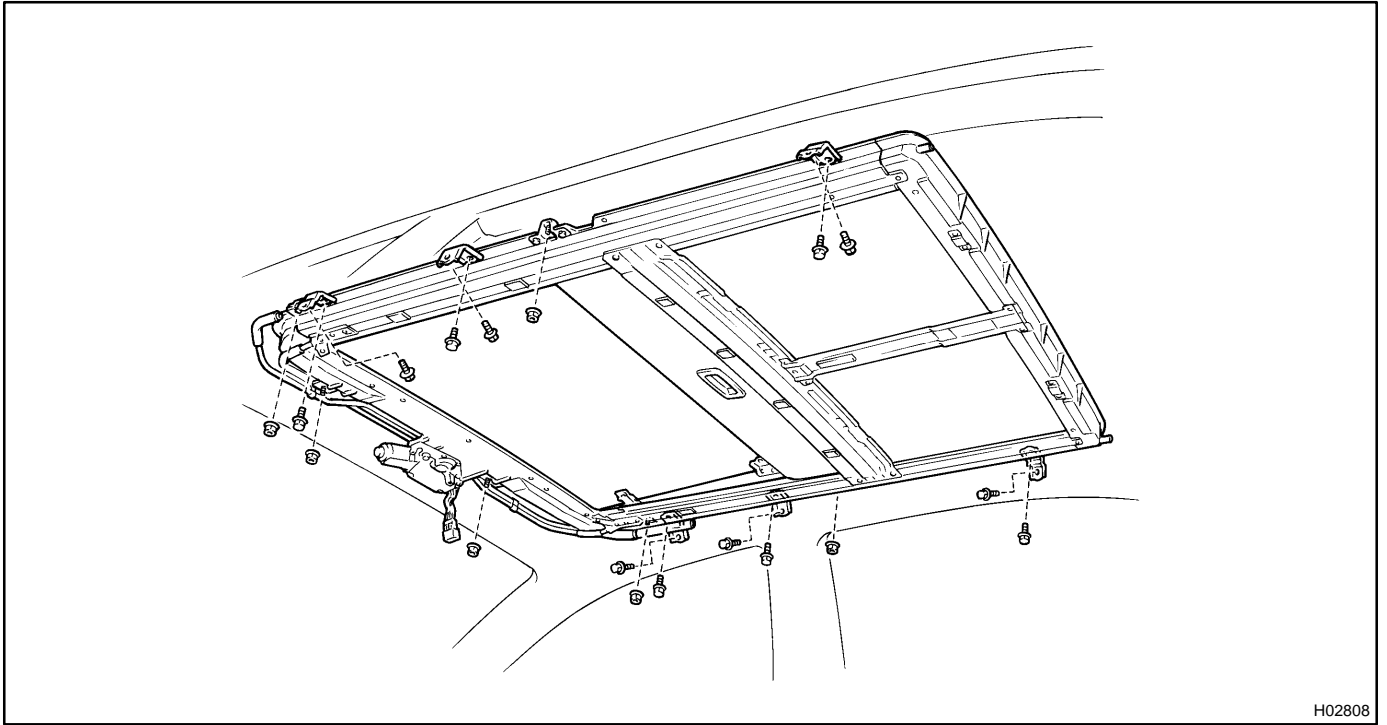


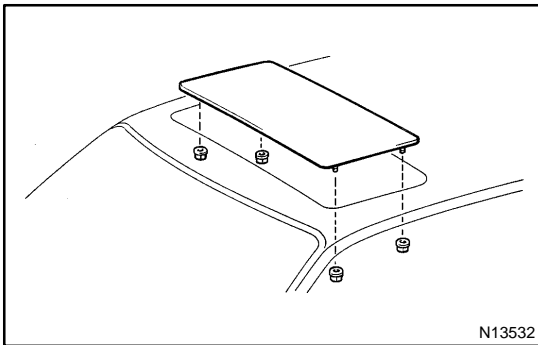
INSTALLATION

1. INSTALL SLIDING ROOF HOUSING

- (a) Install the sliding roof housing with the 6 nuts to the body.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)
- (b) Install the 6 brackets with the 12 bolts.
Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)
- (c) Connect the 4 drain hoses with the 4 clips to the housing.

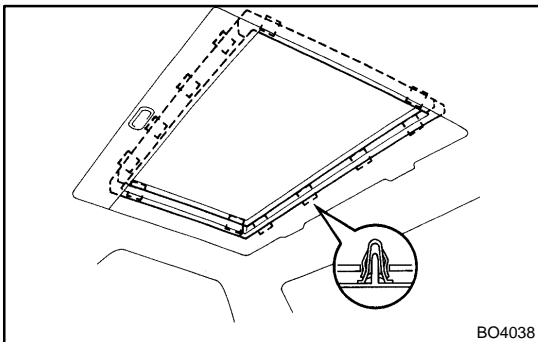


H02808



2. INSTALL SLIDING ROOF GLASS

- Install the sliding roof glass with the 4 nuts.
Torque: 5.5 N·m (56 kgf·cm, 49 in.-lbf)

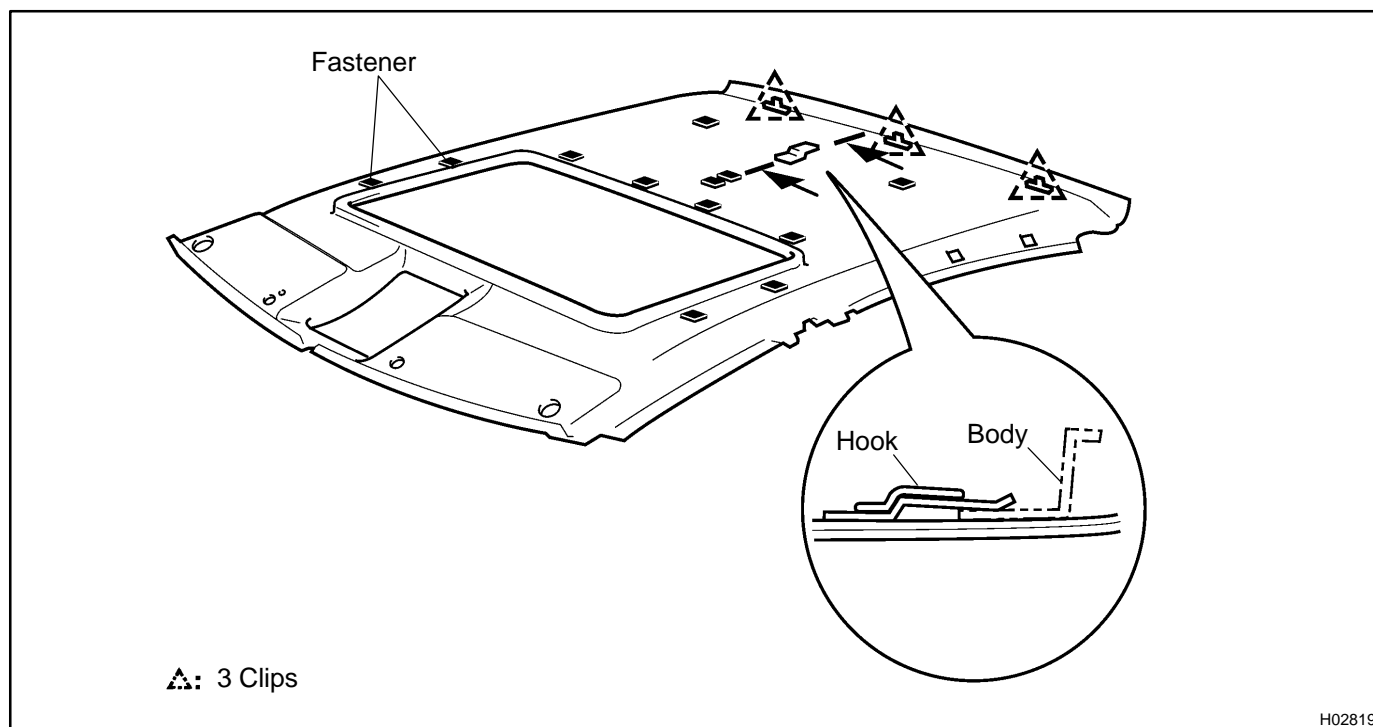


3. INSTALL SLIDING ROOF GARNISHES

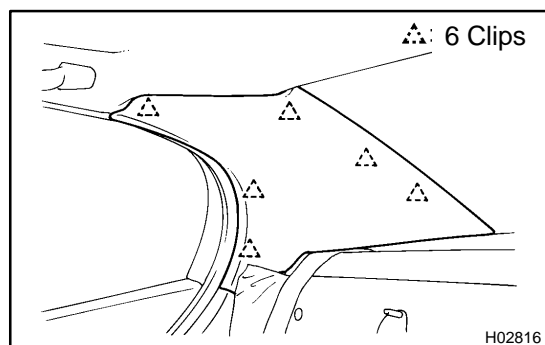
- Install the sliding roof garnishes to the body.

4. INSTALL ROOF HEADLINING

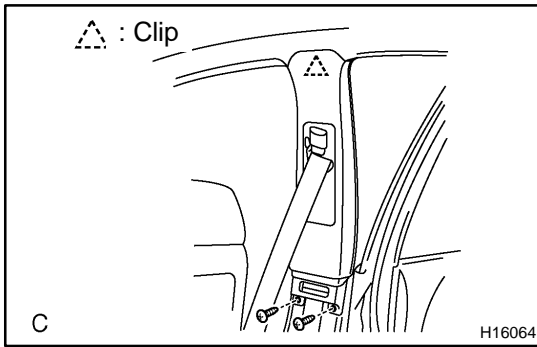
- (a) Install the 2 side rail spacers with the 6 screws.
- (b) Slide the roof headlining rearward to connect the hook to the body.
- (c) Fasten the fastener tape and install the 3 clips to the body.

**5. INSTALL HOLDERS**

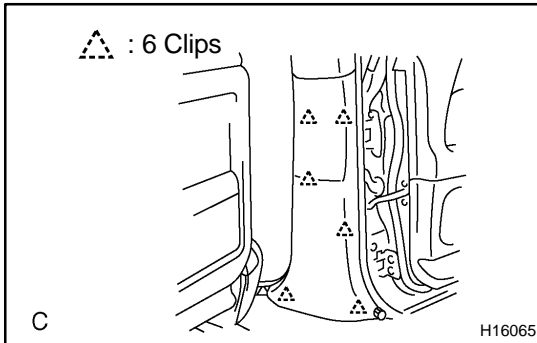
Install the 2 holders with the 2 screws.

**6. INSTALL ROOF SIDE INNER GARNISH**

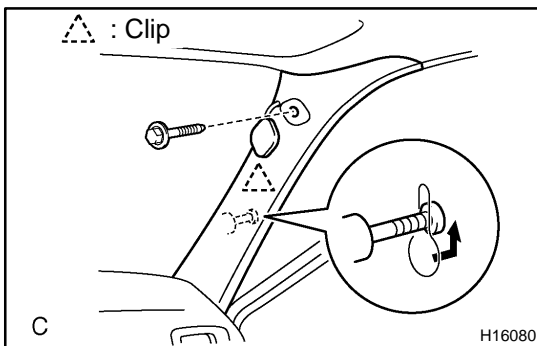
- (a) Install the roof side inner garnish spacer with the 3 screws.
- (b) Install the roof side inner garnish as shown in the illustration.
- (c) Employ the same manner described above to the other side.

**7. INSTALL CENTER PILLAR UPPER GARNISH**

- (a) Install center pillar upper garnish with the 2 screws.
- (b) Employ the same manner described above to the other side.

**8. INSTALL CENTER PILLAR LOWER GARNISH**

- (a) Install the center pillar lower garnish as shown in the illustration.
- (b) Employ the same manner described above to the other side.

**9. INSTALL FRONT PILLAR GARNISH**

- (a) Install the front pillar garnish and cover.
- (b) Install the bolt.
Torque: 9.8 N·m (100 kgf·cm, 7 ft·lbf)
- (c) Close the cover.
- (d) Employ the same manner described above to the other side.

10. INSTALL MAP LAMP ASSEMBLY

- (a) Connect the connectors.
- (b) Install the map lamp assembly with the 4 screws.
- (c) Install the lens and cover.

11. INSTALL INNER REAR VIEW MIRROR COVER**12. INSTALL SUN VISORS****13. INSTALL ASSIST GRIPS****14. INSTALL REAR PERSONAL LIGHTS****15. INSTALL REAR DOOR OPENING TRIMS****16. INSTALL FRONT DOOR OPENING TRIMS****17. INSTALL REAR SEAT SIDE GARNISHES****18. INSTALL REAR DOOR INSIDE SCUFF PLATES****19. INSTALL FRONT DOOR INSIDE SCUFF PLATES****20. INSTALL REAR SEATBACK (See page [BO-122](#))****21. INSTALL REAR SEAT CUSHION (See page [BO-122](#))**