


REMOVAL

1. **REMOVE FRONT WHEEL**
Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)
2. **DISCONNECT SPEED SENSOR CONNECTOR**

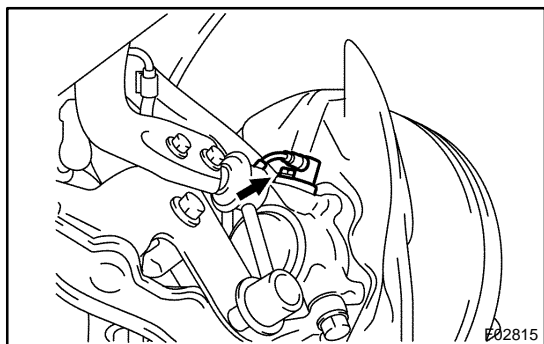

3. **REMOVE SPEED SENSOR**
 - (a) Remove the resin clip and 2 clamp bolts holding the sensor harness to the body.
Torque: 5.0 N·m (51 kgf·cm, 44 in.-lbf)
 - (b) Remove the bolt and speed sensor from the steering knuckle.
Torque: 8.0 N·m (82 kgf·cm, 71 in.-lbf)