



## REASSEMBLY

Reassembly is in the reverse order of disassembly (See page [BR-51](#)).

### INSTALL ACCUMULATOR BRACKET

When installing the accumulator bracket, adjust to ensure that clearance (A, B, D and E) shown in the illustration on the left corresponds to each value in the graphs below and are within the C range, using a thickness gauge.

**C Range: 0.1 – 0.4 mm (0.004 – 0.016 in.)**

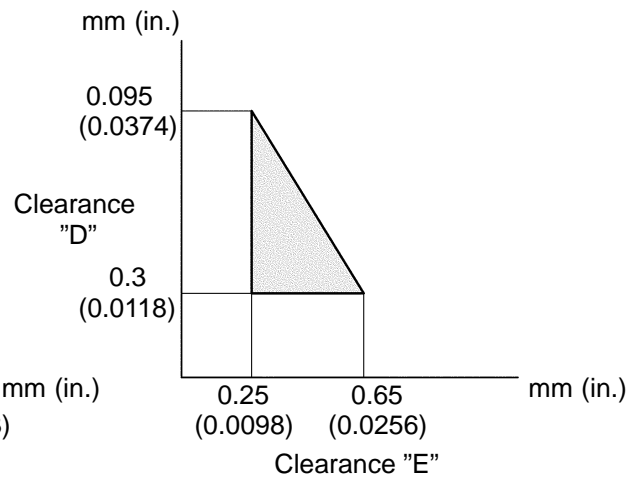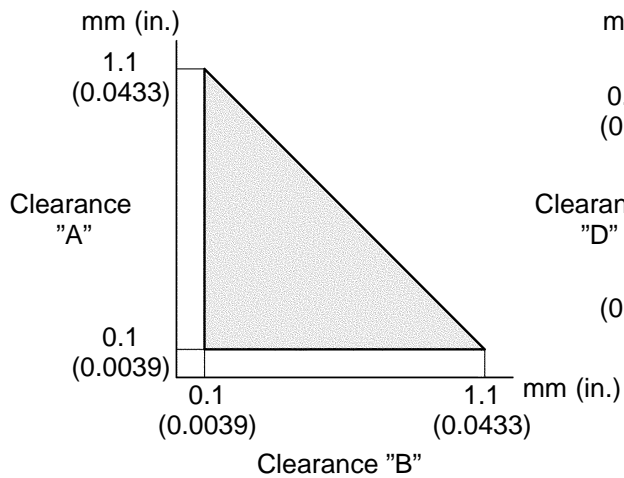

F02901