

F01647

DISASSEMBLY

1. REMOVE REAR WHEEL


Torque: 103 N·m (1,050 kgf·cm, 76 ft·lbf)

2. REMOVE REAR DISC BRAKE ASSEMBLY

- (a) Remove the 2 mounting bolts and remove the disc brake assembly.

Torque: 104 N·m (1,065 kgf·cm, 77 ft·lbf)

- (b) Suspend the disc brake securely and so the hose is not stretched.

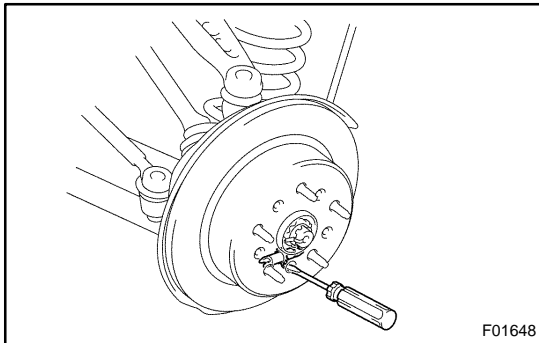

F01648

3. REMOVE DISC

- (a) Release the parking brake pedal.
 (b) Place matchmarks on the disc and rear axle hub.
 (c) Remove the disc.

HINT:

- If the disc cannot be removed easily, turn the shoe adjuster until the wheel turns freely.
- If there are no matchmarks, temporarily install the disc, then measure the disc runout and install the disc in position (See page [BR-30](#)).


4. REMOVE SHOE RETURN SPRINGS

Using a needle-nose pliers, remove the 2 shoe return springs.


5. REMOVE SHOE STRUT WITH SPRING

HINT:

At the time of reassembly, install the strut with the spring facing forward.

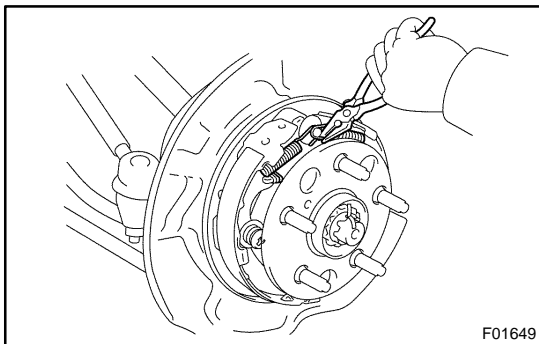


F01649

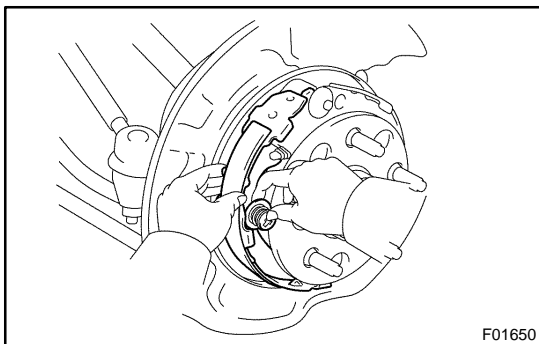

F01650

6. REMOVE FRONT SHOE AND ADJUSTER

- (a) Slide out the front shoe and remove the shoe adjuster.
 (b) Disconnect the tension spring and remove the front shoe.
 (c) Remove the 2 caps, shoe hold-down spring and pin.

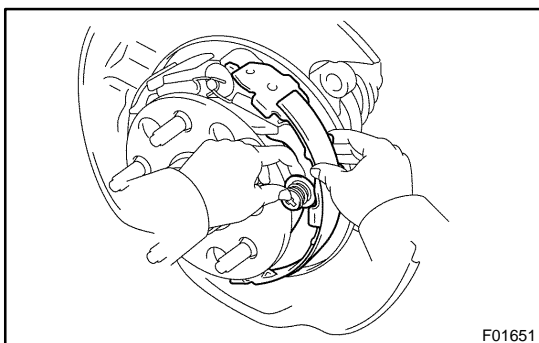

F01651

7. REMOVE REAR SHOE AND TENSION SPRING

- (a) Slide out the rear shoe.
 (b) Remove the tension spring from the rear shoe.
 (c) Disconnect the parking brake cable from the parking brake shoe lever.
 (d) Remove the 2 caps, shoe hold-down spring and pin.