

REMOVAL

1. REMOVE FRONT DOOR SCUFF PLATE, END PAD, NO. 1 UNDER COVER, NO. 1 SAFETY PAD AND NO. 7 HEATER TO REGISTER DUCT (See page [BO-88](#))

2. REMOVE PARKING BRAKE PEDAL ASSEMBLY

- (a) Disconnect the parking brake switch connector.
- (b) Remove the 2 bolts and disconnect the parking brake release lever from the safety pad.

Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

- (c) Remove the lock nut and the adjusting nut from the parking brake wire.

- (d) Remove the parking brake wire.

- (e) Remove the 2 bolts, 2 nuts and parking brake pedal assembly.

Torque: 13 N·m (130 kgf·cm, 9 ft-lbf)

3. REMOVE PARKING BRAKE SWITCH

Remove the screw and parking brake switch from the parking brake pedal assembly.