

INSTALLATION

Installation is in the reverse order of removal (See page [BR-61](#)).

HINT:

After installation, check speed sensor signal (See page [DI-484](#)).