



REASSEMBLY

1. PLACE DRIVE END FRAME ON PULLEY
2. INSTALL ROTOR TO DRIVE END FRAME

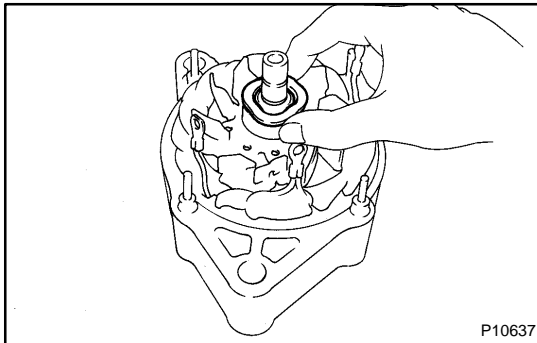


3. INSTALL RECTIFIER END FRAME


- (a) Place the generator washer on the rotor.

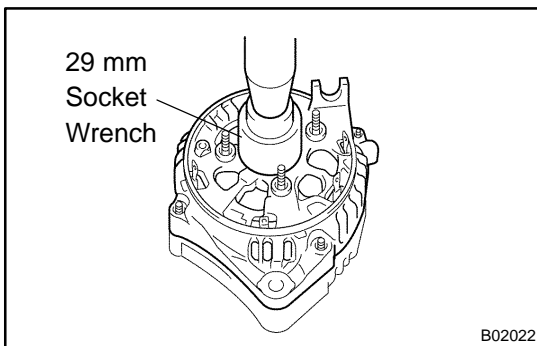

- (b) Using a 29 mm socket wrench and press, slowly press in the rectifier end frame.

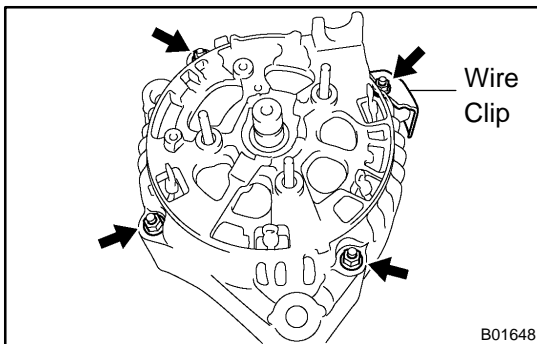


- (c) Install the 3 nuts.
Torque: 4.5 N·m (46 kgf·cm, 40 in.-lbf)
- (d) Install the wire clip with the nut.
Torque: 5.4 N·m (55 kgf·cm, 48 in.-lbf)

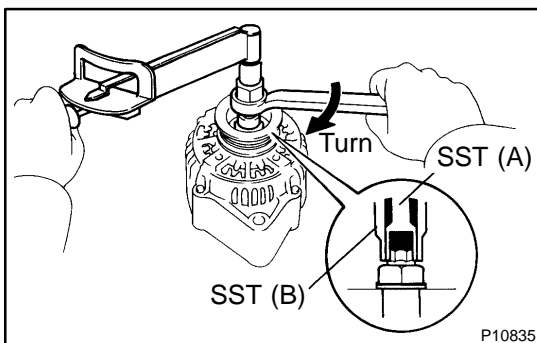


4. INSTALL PULLEY


- (a) Install the pulley to the rotor shaft by tightening the pulley nut by hand.
- (b) Hold SST (A) with a torque wrench, and tighten SST (B) clockwise to the specified torque.
SST 09820-63010
Torque: 39 N·m (400 kgf·cm, 29 ft-lbf)
- (c) Check that SST (A) is secured to the pulley shaft.

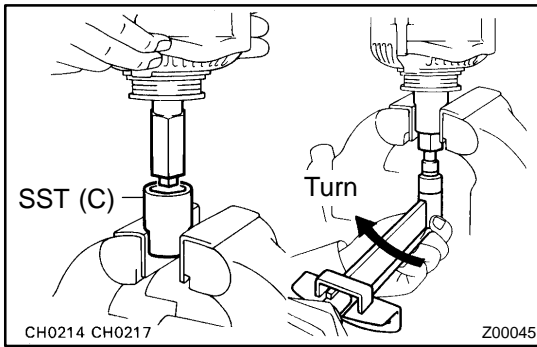

- (d) Mount SST (C) in a vise.
- (e) Insert SST (B) into SST (C), and attach the pulley nut to SST (C).
- (f) To torque the pulley nut, turn SST (A) in the direction shown in the illustration.
Torque: 110.5 N·m (1,125 kgf-cm, 81 ft-lbf)
- (g) Remove the generator from SST (C).

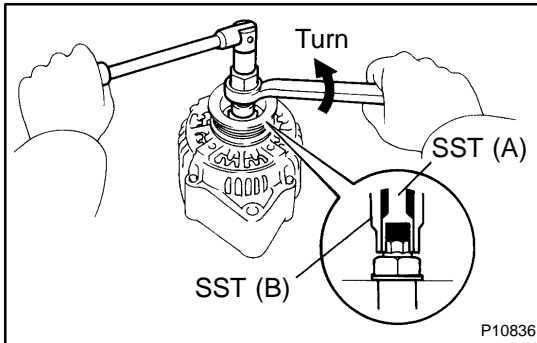


- (h) Turn SST (B), and remove SST (A and B).

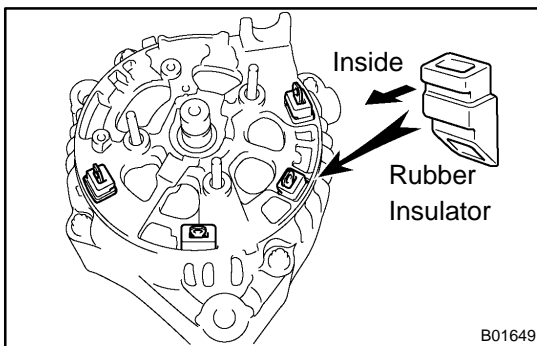


5. INSTALL RECTIFIER HOLDER

- (a) Install the 4 rubber insulators on the lead wires.

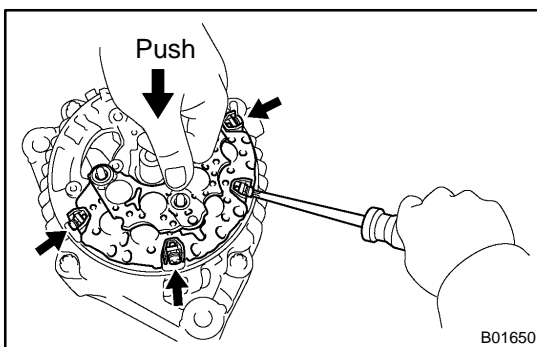


- (b) Install the rectifier holder while pushing it with the 4 screws.
Torque: 2.9 N·m (30 kgf-cm, 26 in.-lbf)

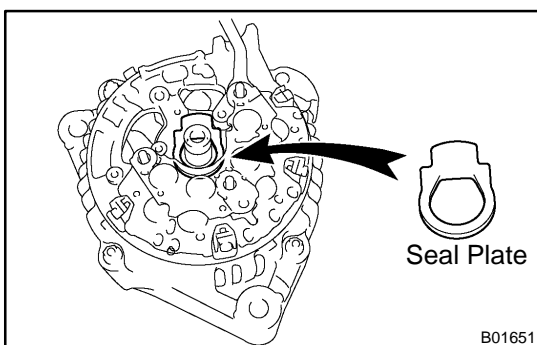

6. INSTALL VOLTAGE REGULATOR AND BRUSH HOLDER

- (a) Place the seal plate on the rectifier end frame.

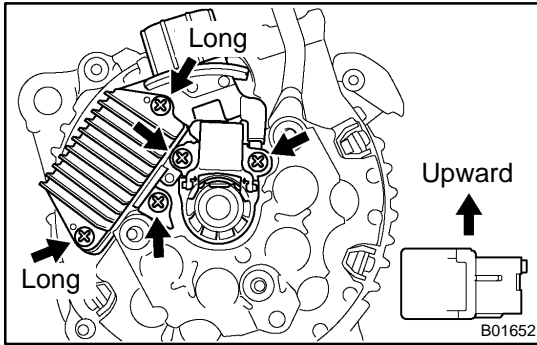


- (b) Place the voltage regulator and brush holder on the rectifier end frame.

NOTICE:


Be careful of the holder installation direction.

- (c) Install the 5 screws.

Torque: 2.0 N·m (20 kgf·cm, 18 in.-lbf)

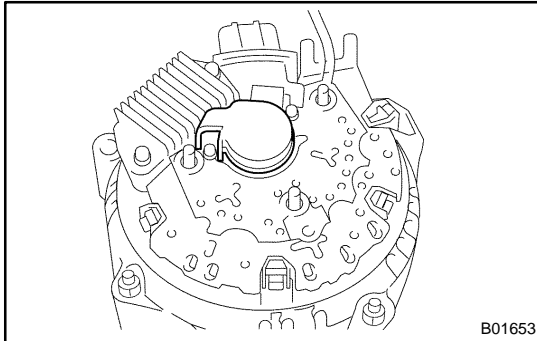

- (d) Place the brush holder cover on the brush holder.

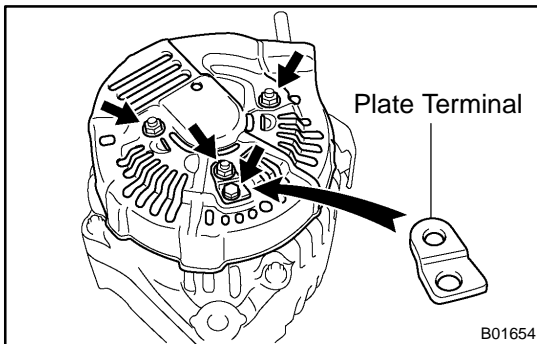**7. INSTALL REAR END COVER**

- (a) Install the end cover and plate terminal with the bolt and 3 nuts.

Torque:

Nut 4.4 N·m (45 kgf·cm, 39 in.-lbf)

Bolt 3.9 N·m (39 kgf·cm, 35 in.-lbf)

- (b) Install the terminal insulator with the nut.

Torque: 6.5 N·m (67 kgf·cm, 58 in.-lbf)

8. CHECK THAT ROTOR ROTATES SMOOTHLY