


REMOVAL

1. **REMOVE ENGINE UNDER COVER**
2. **DRAIN ENGINE COOLANT**
3. **REMOVE AIR CLEANER INLET**
4. **REMOVE AIR CLEANER AND MAF METER ASSEMBLY**
5. **REMOVE RADIATOR AND ELECTRIC COOLING FAN ASSEMBLY**
 - (a) Disconnect the upper radiator hose from the radiator.
 - (b) Disconnect the lower radiator hose from the radiator.
 - (c) Disconnect the ECM outlet duct from the ECM box.
 - (d) Disconnect the wire for electric cooling fan from the clamp on the electric cooling fan.
 - (e) Disconnect the 2 electric cooling fan connectors.
 - (f) Disconnect the ECT switch connector for electric cooling fan.
 - (g) Disconnect the 2 oil cooler hoses for A/T from the radiator.

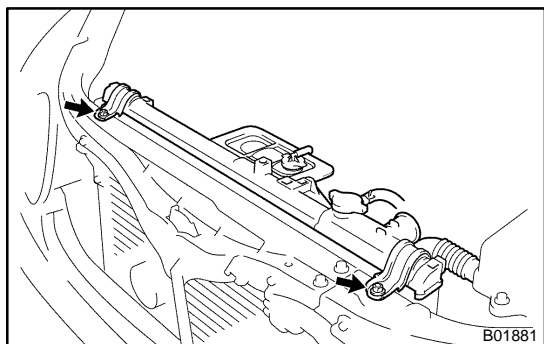

- (h) Remove the 2 nuts and 2 upper radiator supports.
 - (i) Lift out the radiator and cooling fan assembly.
 - (j) Remove the 2 lower radiator supports.
6. **REMOVE ELECTRIC COOLING FAN FROM RADIATOR**
 - (a) Disconnect the radiator reservoir hose from the radiator.
 - (b) Remove the 6 bolts and electric cooling fan.