



INSPECTION

INSPECT WATER PUMP

(a) Visually check the air hole and water hole for coolant leakage.

If necessary, replace the water pump.

(b) Turn the pulley seat, and check that the water pump bearing is not rough or noisy.

If necessary, replace the water pump.