


## INSTALLATION

### 1. INSTALL ELECTRIC COOLING FAN TO RADIATOR

- (a) Install the electric cooling fan with the 6 bolts.

**Torque: 5.0 N·m (50 kgf·cm, 44 in.-lbf)**

- (b) Connect the radiator reservoir hose to the radiator.

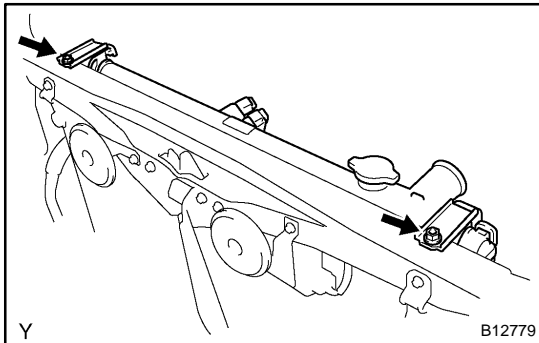

### 2. INSTALL RADIATOR AND ELECTRIC COOLING FAN ASSEMBLY

- (a) Install the 2 lower radiator supports to the radiator.  
(b) Attach the 2 lower radiator supports on the radiator to the body bracket.  
(c) Install the radiator and electric cooling fan assembly with the 2 upper radiator supports and 2 nuts.

**Torque: 13.5 N·m (135 kgf·cm, 10 ft·lbf)**

- (d) Connect the Upper radiator hose to radiator.  
(e) Connect the Lower radiator hose to radiator.  
(f) Connect the ECM outlet duct to ECM box.  
(g) Connect the 2 oil cooler hoses for A/T to radiator.  
(h) Connect the cooling fan computer connector.

### 3. INSTALL AIR CLEANER ASSEMBLY

### 4. INSTALL AIR CLEANER INLET

### 5. FILL WITH ENGINE COOLANT (See page [CO-2](#))

### 6. START ENGINE AND CHECK FOR ENGINE COOLANT AND A/T FLUID LEAKS

### 7. INSTALL ENGINE UNDER COVER