


## REMOVAL

1. REMOVE ENGINE UNDER COVER
2. DRAIN ENGINE COOLANT
3. REMOVE AIR CLEANER INLET
4. REMOVE AIR CLEANER ASSEMBLY
5. REMOVE RADIATOR AND ELECTRIC COOLANT FAN ASSEMBLY
  - (a) Disconnect the Upper radiator hose from radiator.
  - (b) Disconnect the Lower radiator hose from radiator.
  - (c) Disconnect the Engine ECU outlet duct from Engine ECU box.
  - (d) Disconnect the 2 oil cooler hoses for A/T from radiator.
  - (e) Disconnect the cooling fan computer connector.

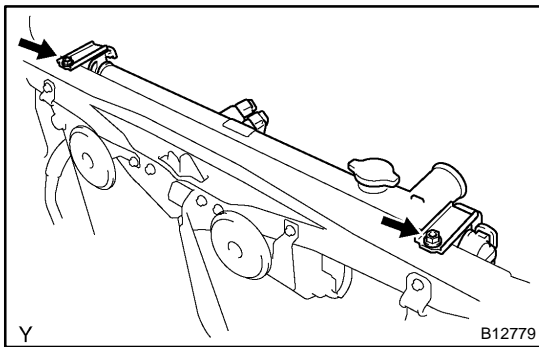

- (f) Remove the 2 nuts and 2 upper radiator support
- (g) Lift out the radiator and cooling fan assembly.
- (h) Remove the 2 lower radiator supports.
6. REMOVE ELECTRIC COOLING FAN FROM RADIATOR
  - (a) Disconnect the radiator reservoir hose from the radiator.
  - (b) Remove the 6 bolts and electric cooling fan.