


RADIATOR FAN MAIN RELAY INSPECTION

CO16K-01

1. REMOVE RELAY BOX COVER
2. REMOVE RADIATOR FAN MAIN RELAY (Marking: RAD FAN MAIN)

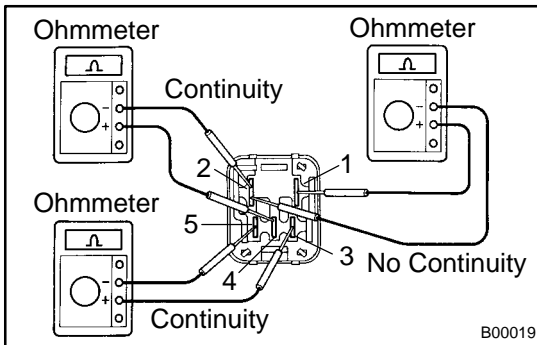

3. INSPECT RADIATOR FAN MAIN RELAY

(a) Inspect the relay continuity

- (1) Using an ohmmeter, check that there is continuity between terminals 3 and 5.


If there is no continuity, replace the relay.

- (2) Check that there is continuity between terminals 2 and 4.

If there is no continuity, replace the relay.

- (3) Check that there is no continuity between terminals 1 and 2.

If there is continuity, replace the relay.

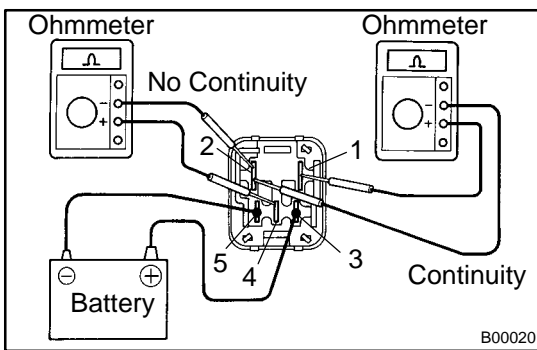

(b) Inspect the relay operation

- (1) Apply battery positive voltage across terminals 3 and 5.

- (2) Using an ohmmeter, check that there is no continuity between terminals 2 and 4.

If there is continuity, replace the relay.

- (3) Check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

4. REINSTALL RADIATOR FAN MAIN RELAY
5. REINSTALL RELAY BOX COVER