


DTC	B1432/32	Air Inlet Damper Position Sensor Circuit
------------	-----------------	---

DTC	B1442/42	Air Inlet Damper Position Sensor Circuit
------------	-----------------	---


CIRCUIT DESCRIPTION

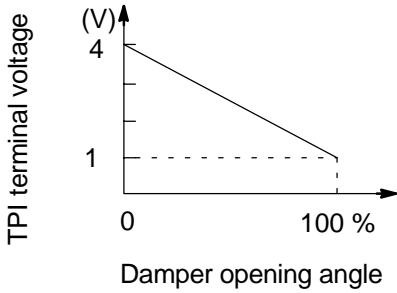

This sensor detects the position of the air inlet damper and sends the appropriate signals to the A/C control assembly. The position sensor is built into the air inlet damper control servomotor assembly.

DTC No.	Detection Item	Trouble Area
B1432/32	Short to ground or power source circuit in air inlet damper position sensor circuit.	<ul style="list-style-type: none"> Air inlet damper position sensor.
B1442/42	Air inlet damper position sensor value does not change even if A/C control assembly operates air inlet damper control servomotor.	<ul style="list-style-type: none"> Harness or connector between air inlet damper control servomotor assembly and A/C control assembly. A/C control assembly.

WIRING DIAGRAM

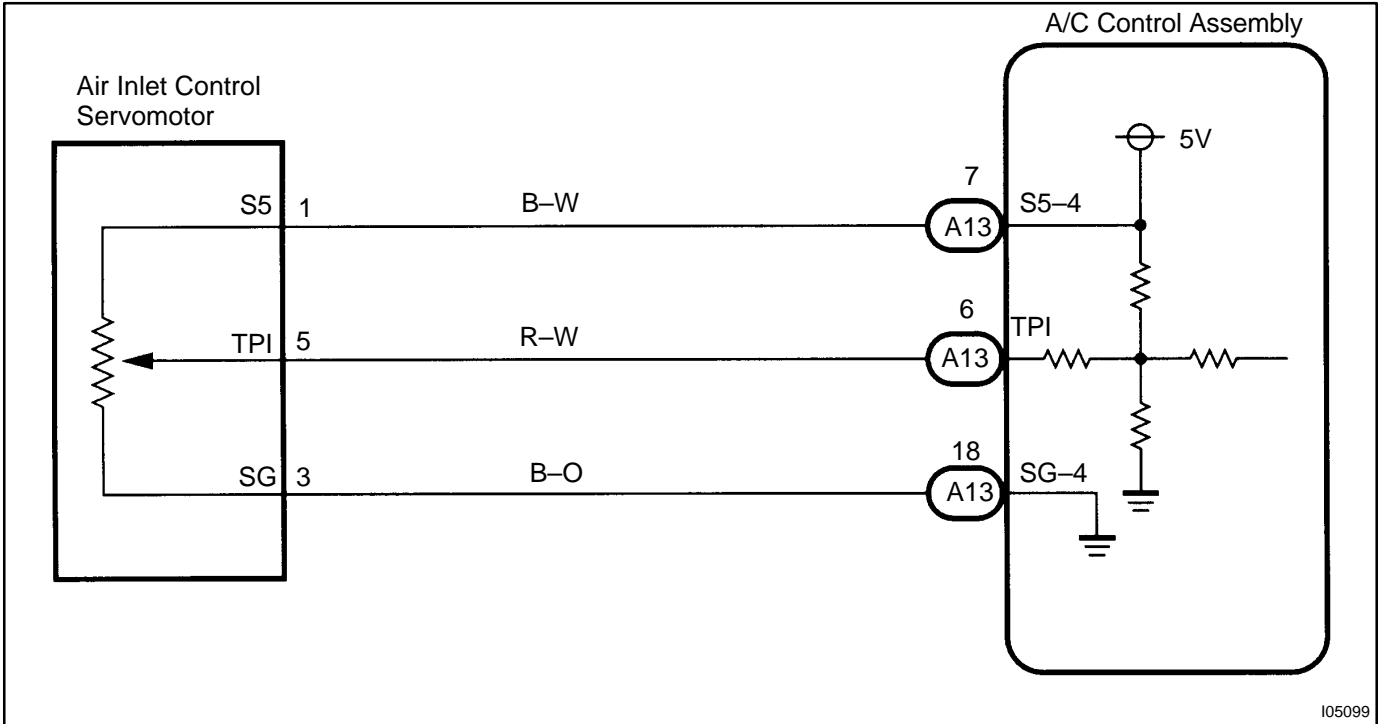

105099

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step1 and in case of not using the LEXUS hand-held tester, start from step2.

1 Check air inlet damper position using LEXUS hand-held tester.

PREPARATION:

Connect the LEXUS hand-held tester to the DLC3.

CHECK:

Check the current position of air inlet damper and the target position of air inlet damper.

OK:


The current position and target position are almost similar.

OK

Check and replace A/C control assembly.

NG

2 Check voltage between terminals TPI and SG-4 of A/C control assembly connector.

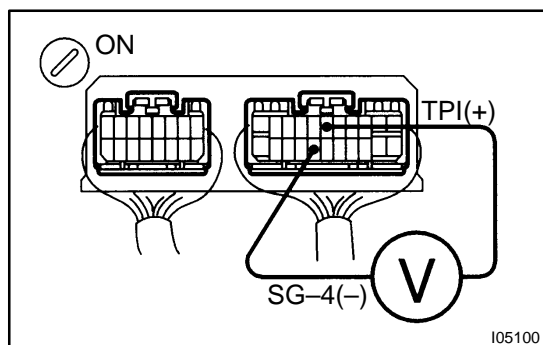

PREPARATION:

Remove A/C control assembly with connectors still connected.

CHECK:

- Turn ignition switch ON.
- Press REC/FRS switch to change air inlet between fresh and recirculation air, and measure voltage between terminals TPI and SG-4 of A/C control assembly when the air inlet damper control servomotor operates.

OK:

FRS-REC Switch	Voltage
REC	3.5 – 4.5 V
FRS	0.5 – 1.5 V

HINT:

As the air inlet damper control servomotor is moved from REC side to FRS side, the voltage decreases.


NG

Go to step 3.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-1309](#)). However, if DTC B1432/32 or B1442/42 is displayed, check and replace A/C control assembly.

3 Check air inlet damper position sensor.

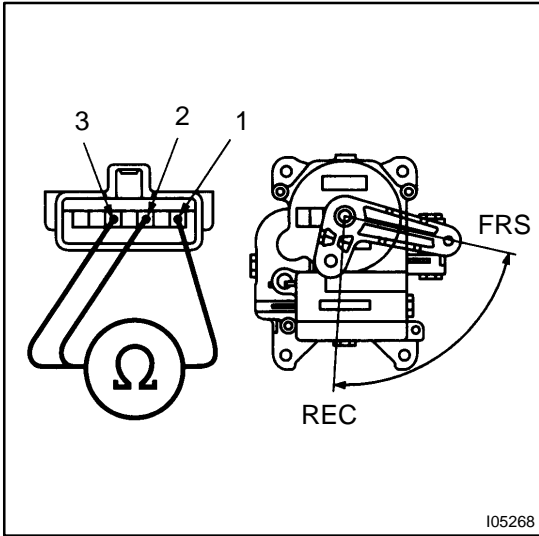

PREPARATION:

- (a) Remove heater unit (See page AC-24).
- (b) Disconnect air inlet damper control servomotor assembly connector.

CHECK:

Measure resistance between terminals 1 and 3 of air inlet damper control servomotor assembly connector.

OK:

Resistance : 4.2 – 7.8 kΩ

CHECK:

While operating air inlet damper control servomotor, following the procedure on page DI-1351, measure resistance between terminals 1 and 5 of air inlet damper control servomotor assembly connector.

OK:

Resistance

Damper Position	Resistance
REC side	3.1 – 5.8 kΩ
FRS side	0.8 – 1.6 kΩ

HINT:

As the air inlet damper control servomotor moves from REC side to FRS side, the resistance decreases.

NG

Replace air inlet damper control servomotor assembly.

OK

4 Check harness and connectors between A/C control assembly and air inlet damper control servomotor assembly (See page IN-32).

NG

Repair or replace harness or connector.

OK

Check and replace A/C control assembly.