


BRAKE Warning Light Circuit

CIRCUIT DESCRIPTION

The BRAKE warning light light up while the brake fluid is insufficient and when ECU detects malfunction of hydraulic brake booster system.

WIRING DIAGRAM

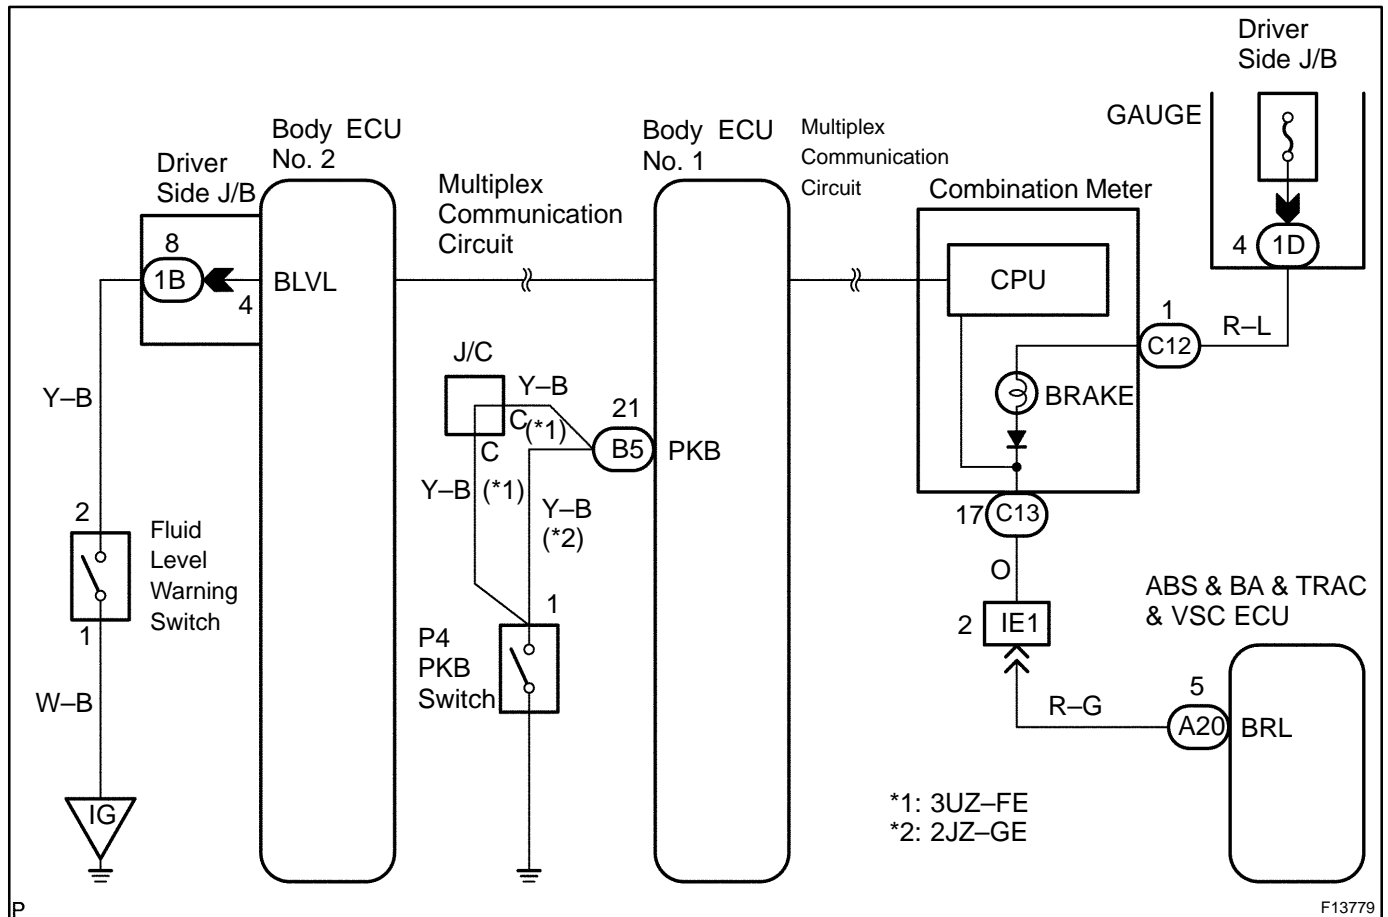

INSPECTION PROCEDURE

1	Check parking brake switch circuit (See page DI-947).
---	--

NG

Repair or replace parking brake switch circuit.

OK

2	Check brake fluid level warning switch circuit (See page DI-988).
----------	--

NG	Repair or replace brake fluid level warning switch circuit.
-----------	--

OK

3	Is DTC output for ABS?
----------	-------------------------------

Yes	Repair circuit indicated by the output code.
------------	---

No

4	Check BRAKE warning light.
----------	-----------------------------------

See combination meter troubleshooting on page [BE-3](#).

NG	Repair or replace combination meter.
-----------	---

OK

5	Check multiplex communication system (See page DI-1112).
----------	---

NG	Repair or replace multiplex communication circuit.
-----------	---

OK

Check and replace ABS & BA & TRAC & VSC ECU.
