


Tc Terminal Circuit

CIRCUIT DESCRIPTION


Connecting terminals Tc and E₁ of DLC1 (or Tc and CG of DLC3) causes the ECU to display the DTC by flashing the ABS warning light.

WIRING DIAGRAM

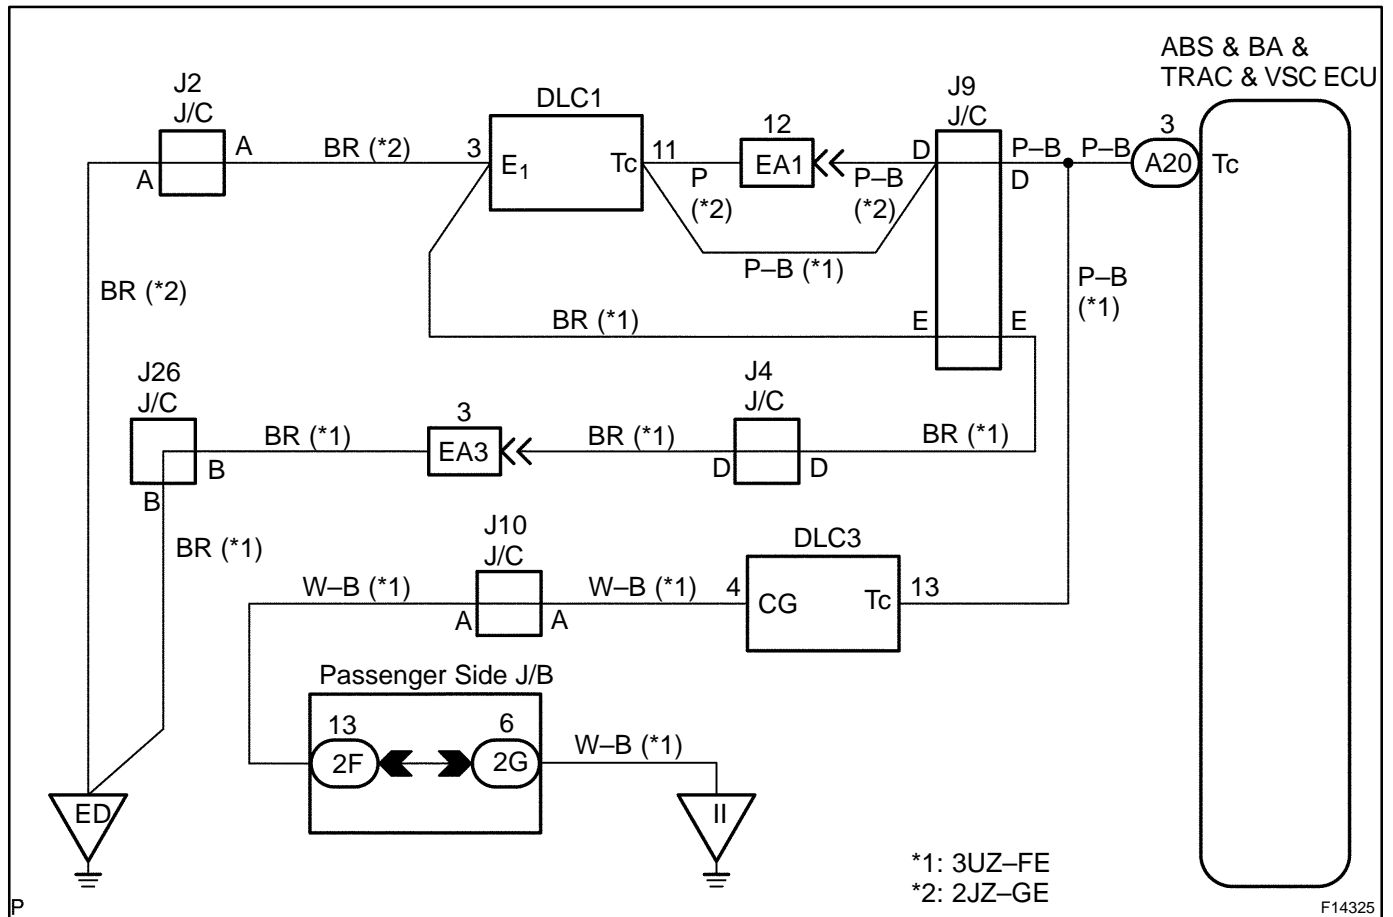

INSPECTION PROCEDURE

- 1 Check voltage between terminals Tc and E₁ of DLC1 (or Tc and CG of DLC3).

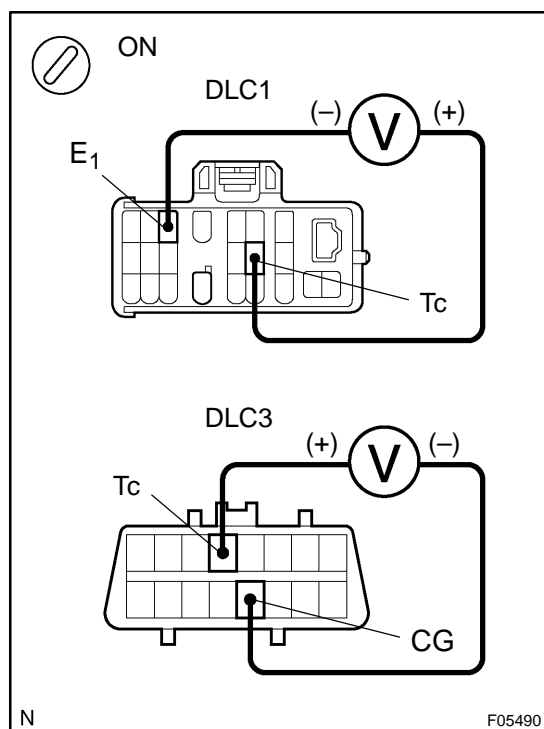

PREPARATION:

Turn the ignition switch ON.

CHECK:

Measure voltage between terminal Tc and E₁ of DLC1 (or Tc and CG of DLC3).

OK:

Voltage: 10 – 14 V

OK

If ABS warning light does not blink even after Tc and E₁ (or Tc and CG) are connected, the ECU may be defective.

NG

- 2 IG switch OFF, and check for open and short circuit in harness and connector between ABS & TRAC & VSC ECU and DLC1 (or DLC3), DLC1 (or DLC3) and body ground (See page [IN-32](#)).

NG

Repair or replace harness or connector.

OK

Check and replace ABS & BA & TRAC & VSC ECU.