

DIAGNOSTIC TROUBLE CODE CHART

NOTICE:

When removing the part, turn the ignition switch OFF.

HINT:

- Using SST 09843-18020, connect the terminals Tc and E₁ of DLC1 and remove the short pin of DLC1.
- If any abnormality is not found when inspecting parts, inspect the ECU.
- If a malfunction code is displayed during the DTC check, check the circuit listed that code. For details of each code, turn to the page referred to under the "See page" for respective "DTC No." in the DTC chart.

DTC No. (See Page)	Detection Item	Trouble Area
C0200 / 31* ¹ (DI-497)	Right front wheel speed sensor signal malfunction	<ul style="list-style-type: none"> • Right front, left front, right rear and left rear speed sensor • Each speed sensor circuit • Sensor rotor
C0205 / 32* ¹ (DI-497)	Left front wheel speed sensor signal malfunction	
C0210 / 33* ¹ (DI-497)	Right rear wheel speed sensor signal malfunction	
C0215 / 34* ¹ (DI-497)	Left rear wheel speed sensor signal malfunction	
C0226 / 21 (DI-503)	Open or short circuit in hydraulic brake booster solenoid circuit (SFR circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SFR or SFRH circuit
C0236 / 22 (DI-503)	Open or short circuit in hydraulic brake booster solenoid circuit (SFL circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SFL or SFLH circuit
C0246 / 23 (DI-503)	Open or short circuit in hydraulic brake booster solenoid circuit (SRR circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SRR or SRRH circuit
C0256 / 24 (DI-503)	Open or short circuit in hydraulic brake booster solenoid circuit (SRL circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SRL or SRLH circuit
C0278 / 11 (DI-505)	Open or short circuit in ABS solenoid relay circuit	<ul style="list-style-type: none"> • ABS solenoid relay • ABS solenoid relay circuit
C0279 / 12 (DI-505)	B+ short circuit in ABS solenoid relay circuit	
C1225 / 25 (DI-509)	Open or short circuit in hydraulic brake booster solenoid circuit (SA1 circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SA1 circuit
C1226 / 26 (DI-509)	Open or short circuit in hydraulic brake booster solenoid circuit (SA2 circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SA2 circuit
C1227 / 27 (DI-509)	Open or short circuit in hydraulic brake booster solenoid circuit (SA3 circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • SA3 circuit
C1228 / 28 (DI-509)	Open or short circuit in hydraulic brake booster solenoid circuit (STR circuit)	<ul style="list-style-type: none"> • Hydraulic brake booster • STR circuit
C1241 / 41 (DI-511)	Low battery positive voltage or abnormally high battery positive voltage	<ul style="list-style-type: none"> • Battery • IC regulator • Power source circuit
C1242 / 42* ² (DI-514)	Open circuit in IG2 circuit	<ul style="list-style-type: none"> • Battery • IC regulator • Power source circuit
C1243 / 43 (DI-517)	Malfunction in deceleration sensor (constant output)	<ul style="list-style-type: none"> • Deceleration sensor • Wire harness for deceleration sensor system
C1244 / 44 (DI-519)	Open or short circuit in deceleration sensor circuit	<ul style="list-style-type: none"> • Deceleration sensor • Deceleration sensor circuit

C1245 / 45 (DI-517)	Malfunction in deceleration sensor	<ul style="list-style-type: none"> • Deceleration sensor • Wire harness for deceleration sensor sytem
C1246 / 46 (DI-521)	Malfunction in master cylinder pressure sensor	<ul style="list-style-type: none"> • Master cylinder pressure sensor • Master cylinder pressure sensor circuit
C1249 / 49 (DI-524)	Open circuit in stop light switch circuit	Stop light switch circuit
C1251 / 51*2 (DI-527)	Pump motor is locked Open circuit in pump motor ground	Hydraulic brake booster pump motor
C1252 / 52*2 (DI-530)	Hydro-booster pump motor malfunction	<ul style="list-style-type: none"> • Hydraulic brake booster pump motor • Hydraulic brake booster pump motor circuit • Pressure switch (PH or PL)
C1253 / 53*2 (DI-536)	Hydro-booster pump motor relay malfunction	<ul style="list-style-type: none"> • ABS and TRAC motor relay • ABS and TRAC motor relay circuit
C1254 / 54*2 (DI-540)	Pressure switch malfunction	<ul style="list-style-type: none"> • Pressure switch (PH or PL) • Pressure switch circuit
C1256 / 56*2 (DI-543)	Accumulator low pressure malfunction	<ul style="list-style-type: none"> • Accumulator • Pressure switch (PH or PL) • Hydraulic brake booster pump motor
C1257 / 57*2 (DI-549)	Power supply drive circuit malfunction	<ul style="list-style-type: none"> • Battery • Power Source circuit • ABS & BA TRAC & VSC ECU
Always ON (DI-552)	Malfunction in ABS & BA & TRAC & VSC ECU	<ul style="list-style-type: none"> • Battery • IC regulator • Power source circuit • ABS & BA & TRAC & VSC ECU

*1: As the DTC cannot be erased by replacing parts alone do either of the following operations.

(1) Clear DTC (See page DI-484).

(2) At the vehicle speed of 20 km/h (12 mph), drive the vehicle for 30 sec. or more.

*2: Using the following table, troubled parts can be specifiede.

DTC		C1242/42		C1251/51		C1252/52		C1253/53		C1254/54		C1256/56		C1257/57	
BRAKE warning light and buzzer		Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer	Light	Buzzer
Pressure switch	PH					○	○			○		○	○		
	PL					○	○			○		○	○		
Pump motor circuit	Pump motor			○	○	○	○					○	○		
	MTT wire harness					○	○	○							
	MT+ wire harness			○											
	MT- wire harness			○											
Accumulator malfanction												○	○		
Motor relay circuit	MR1 open circuit							○							
	MR2 open circuit							○							
	MR1 welded contact					○	○	○							
	MR2 welded contact					○	○	○							
Hydraulic brake booster	Pressure leaks					○	○					○	○		
Power souce*	IG2 open circuit	○													
ECU	Power suply circuit													○	

*: When IG1 circuit is open, ABS warning light and BRAKE warning light come on.