

DIAGNOSTIC TROUBLE CODE CHART

If a DTC is displayed during the DTC check, check the circuit listed in the table below and proceed to the page given.

DTC No. (See Page)	Detection Item	Trouble Area	MIL	Memory
P0500 (DI-367)	Vehicle Speed Sensor Malfunction	<ul style="list-style-type: none"> • Open or short in vehicle speed sensor circuit • Vehicle speed sensor • Combination meter • ECM • Automatic transmission assembly 	●	○
P0710 (DI-371)	Transmission Fluid Temperature Sensor Circuit Malfunction (ATF Temperature Sensor)	<ul style="list-style-type: none"> • Open or short in ATF temperature sensor circuit • ATF temperature sensor circuit • ECM 	●	○
P0711 (DI-373)	Transmission Fluid Temperature Sensor Circuit Range/Performance problem	<ul style="list-style-type: none"> • Open in ATF temperature sensor • ATF temperature sensor circuit • ECM 	●	○
P0715 (DI-374)	Input/Turbine Speed Sensor Circuit Malfunction (O/D Direct Clutch Speed Sensor)	<ul style="list-style-type: none"> • Open or short in O/D direct clutch speed sensor circuit • O/D direct clutch speed sensor • ECM • Automatic transmission assembly 	●	○
P0750 (DI-378)	Shift Solenoid "A" Malfunction (Shift Solenoid Valve No. 1)	<ul style="list-style-type: none"> • Shift solenoid valve No. 1 is stuck open or closed • Valve body is blocked up or stuck • Automatic transmission assembly 	●	○
P0753 (DI-381)	Shift Solenoid "A" Electrical Malfunction (Shift Solenoid Valve No. 1)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No. 1 circuit • Shift solenoid valve No. 1 • ECM 	●	○
P0755 (DI-378)	Shift Solenoid "B" Malfunction (Shift Solenoid Valve No. 2)	<ul style="list-style-type: none"> • Shift solenoid valve No. 2 is stuck open or closed • Valve body is blocked up or stuck • Automatic transmission assembly 	●	○
P0758 (DI-381)	Shift Solenoid "B" Electrical Malfunction (Shift Solenoid Valve No. 2)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No. 2 circuit • Shift solenoid valve No. 2 • ECM 	●	○
P0760 (DI-378)	Shift Solenoid "C" Malfunction (Shift Solenoid Valve No. 3)	<ul style="list-style-type: none"> • Shift solenoid valve No. 3 is stuck open or closed • Valve body is blocked up or stuck • Automatic transmission assembly 	●	○
P0763 (DI-381)	Shift Solenoid "C" Electrical Malfunction (Shift Solenoid Valve No. 3)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No. 3 circuit • Shift solenoid valve No. 3 • ECM 	●	○
P0768 (DI-386)	Shift Solenoid "D" Electrical Malfunction (Shift Solenoid Valve No. 4)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve No. 4 circuit • Shift solenoid valve No. 4 • ECM 	●	○
P0770 (DI-389)	Shift Solenoid "E" Malfunction (Shift Solenoid Valve SLU)	<ul style="list-style-type: none"> • Shift solenoid valve SLU is stuck open or closed • Valve body is blocked up or stuck • Lock-up clutch • Automatic transmission assembly 	●	○
P1520 (DI-392)	Stop Light Switch Malfunction	<ul style="list-style-type: none"> • Open or short in stop light switch signal circuit • Stop light switch • ECM 	●	○
P1755 (DI-393)	Linear Solenoid for Lock-up Control Circuit Malfunction (Shift Solenoid Valve SLU)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLU circuit • Shift solenoid valve SLU • ECM 	●	○

P1760 (DI-395)	Linear Solenoid for Line Pressure Control Circuit Malfunction (Shift Solenoid Valve SLT)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLT circuit • Shift solenoid valve SLT • ECM 	●	○
P1765 (DI-398)	Linear Solenoid for Accumulator Pressure Control Circuit Malfunction (Shift Solenoid Valve SLN)	<ul style="list-style-type: none"> • Open or short in shift solenoid valve SLN circuit • Shift solenoid valve SLN • ECM 	●	○
P1780 (DI-401)	Park/Neutral Position Switch Malfunction	<ul style="list-style-type: none"> • Short in park/neutral position switch circuit • Park/neutral position switch • ECM 	●	○

* : ●...MIL light up