


## Hazard switch circuit

### CIRCUIT DESCRIPTION

Body ECU No. 1 activates the flasher relay during warning of the theft deterrent system and flashes the hazard.

### WIRING DIAGRAM

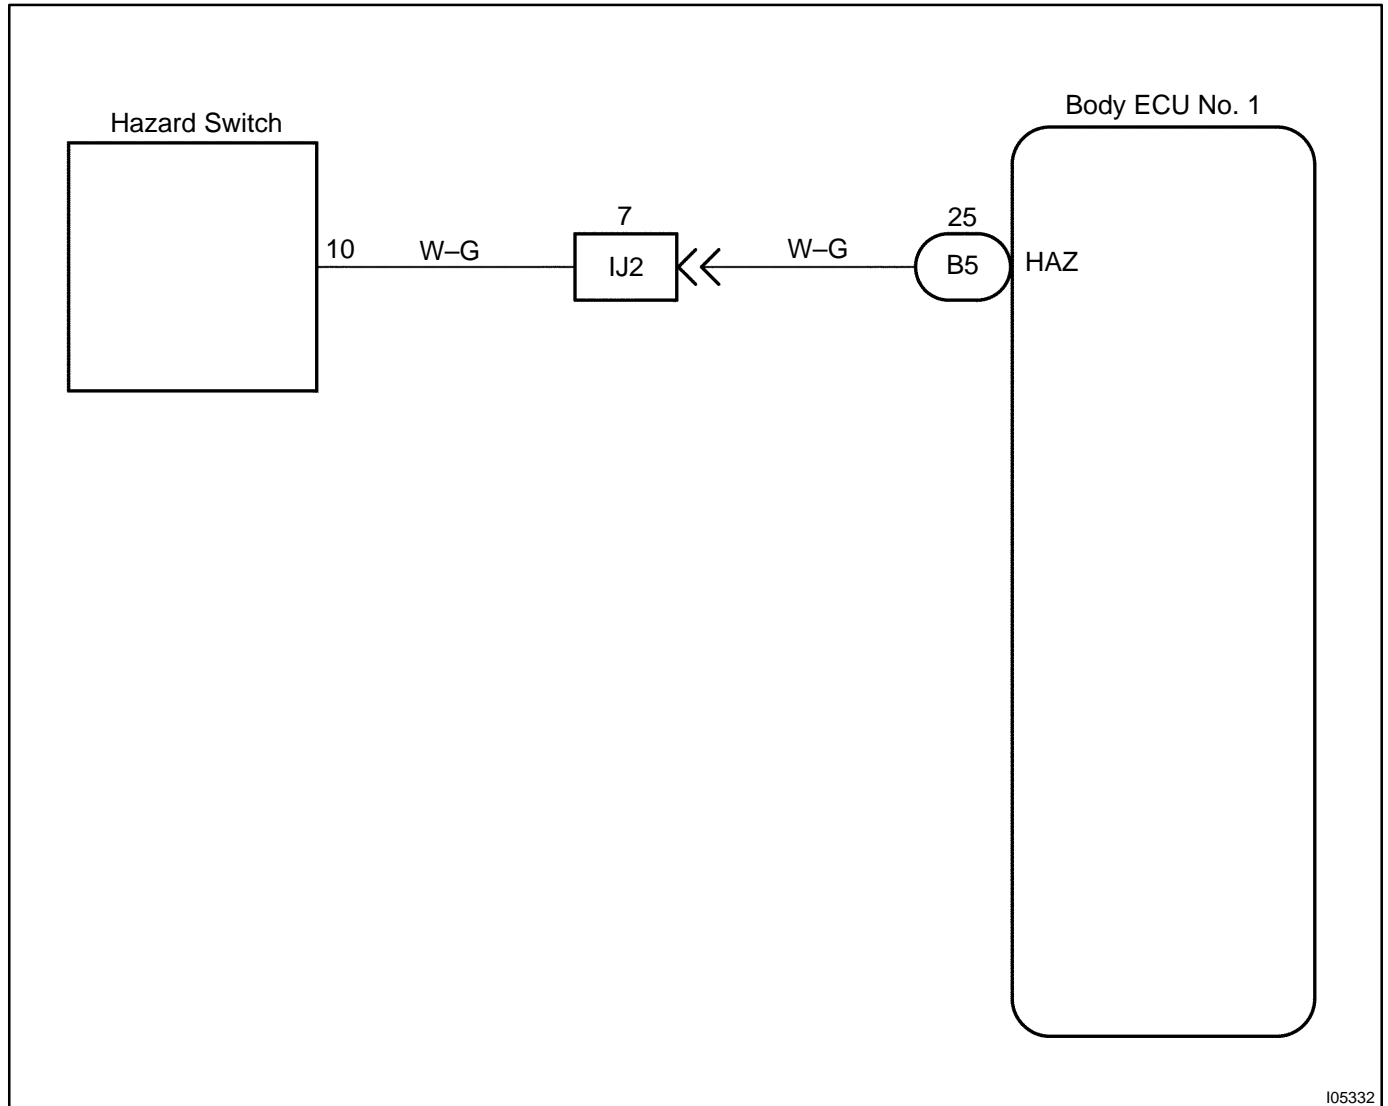

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check hazard operation using LEXUS hand-held tester.
---	--

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

### CHECK:

Check that the hazard can operate in an ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-931](#))

NG

2	Check hazard switch. (See page <a href="#">BE-57</a> )
---	--

NG

Replace the hazard switch.

OK

3	Check wireharness and connector between hazard switch and Body ECU No. 1.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-931](#))