


Heater main relay circuit

WIRING DIAGRAM

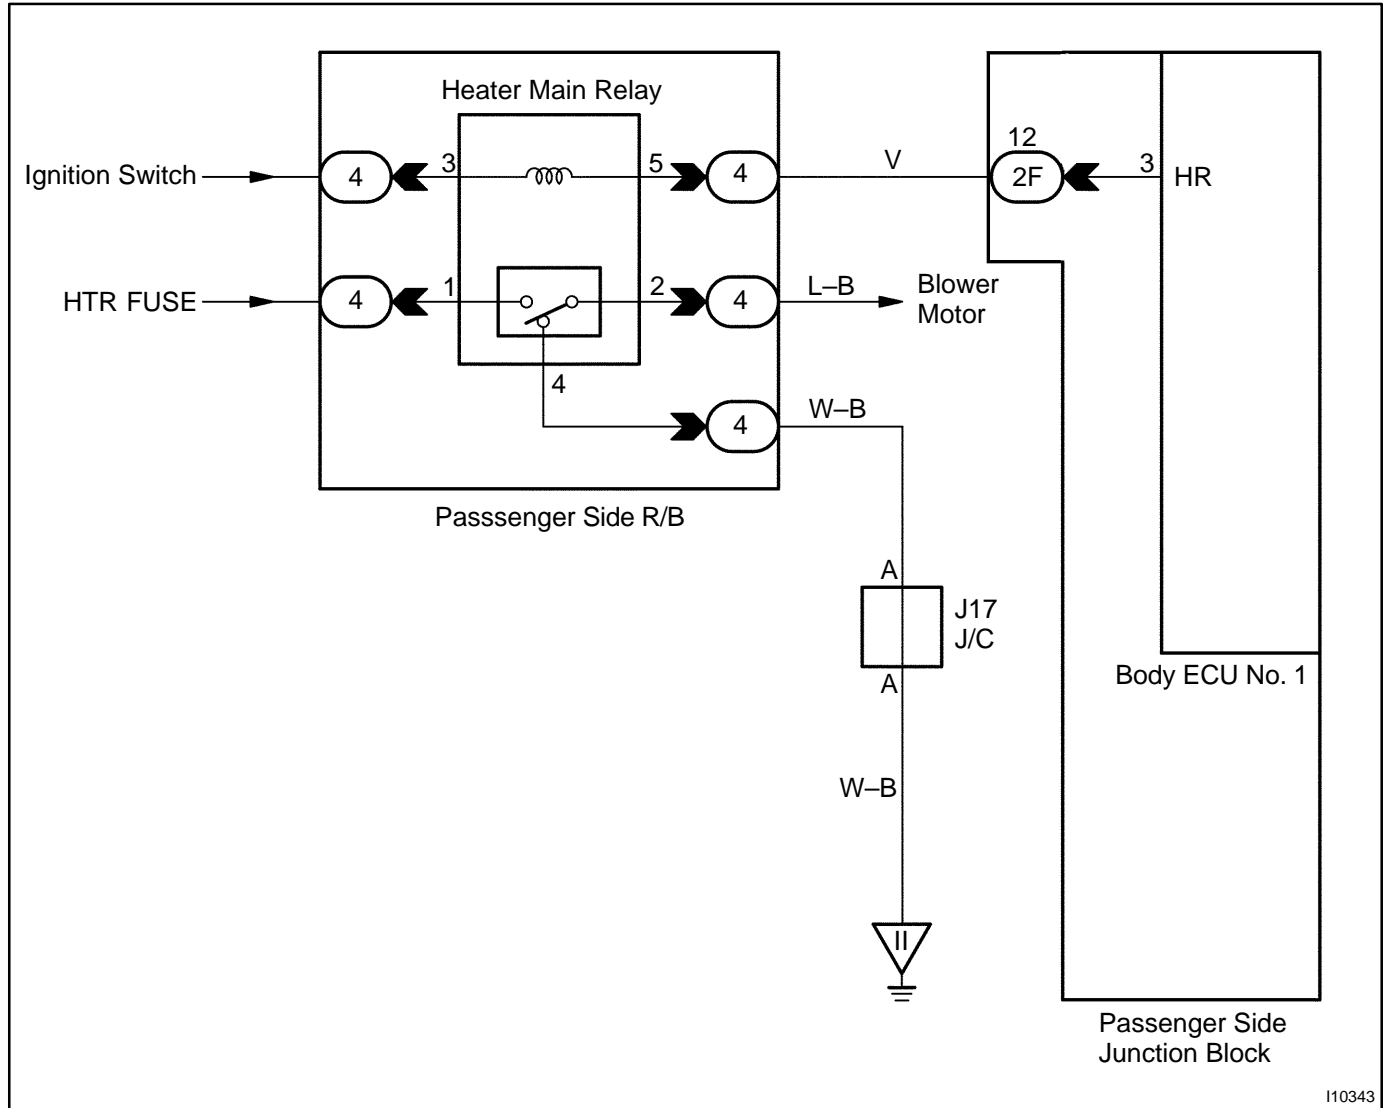

I10343

INSPECTION PROCEDURE

1	Check heater main relay (See page AC-79).
----------	--

NG**Replace the heater main relay.****OK**

2	Check wireharness and connector between heater main relay and Body ECU No. 1.
----------	--

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-1309](#))**