


Horn circuit

CIRCUIT DESCRIPTION

The horn is connected to the Body ECU No. 1 and activated by the Body ECU No. 1 during warning of the theft deterrent system.

WIRING DIAGRAM

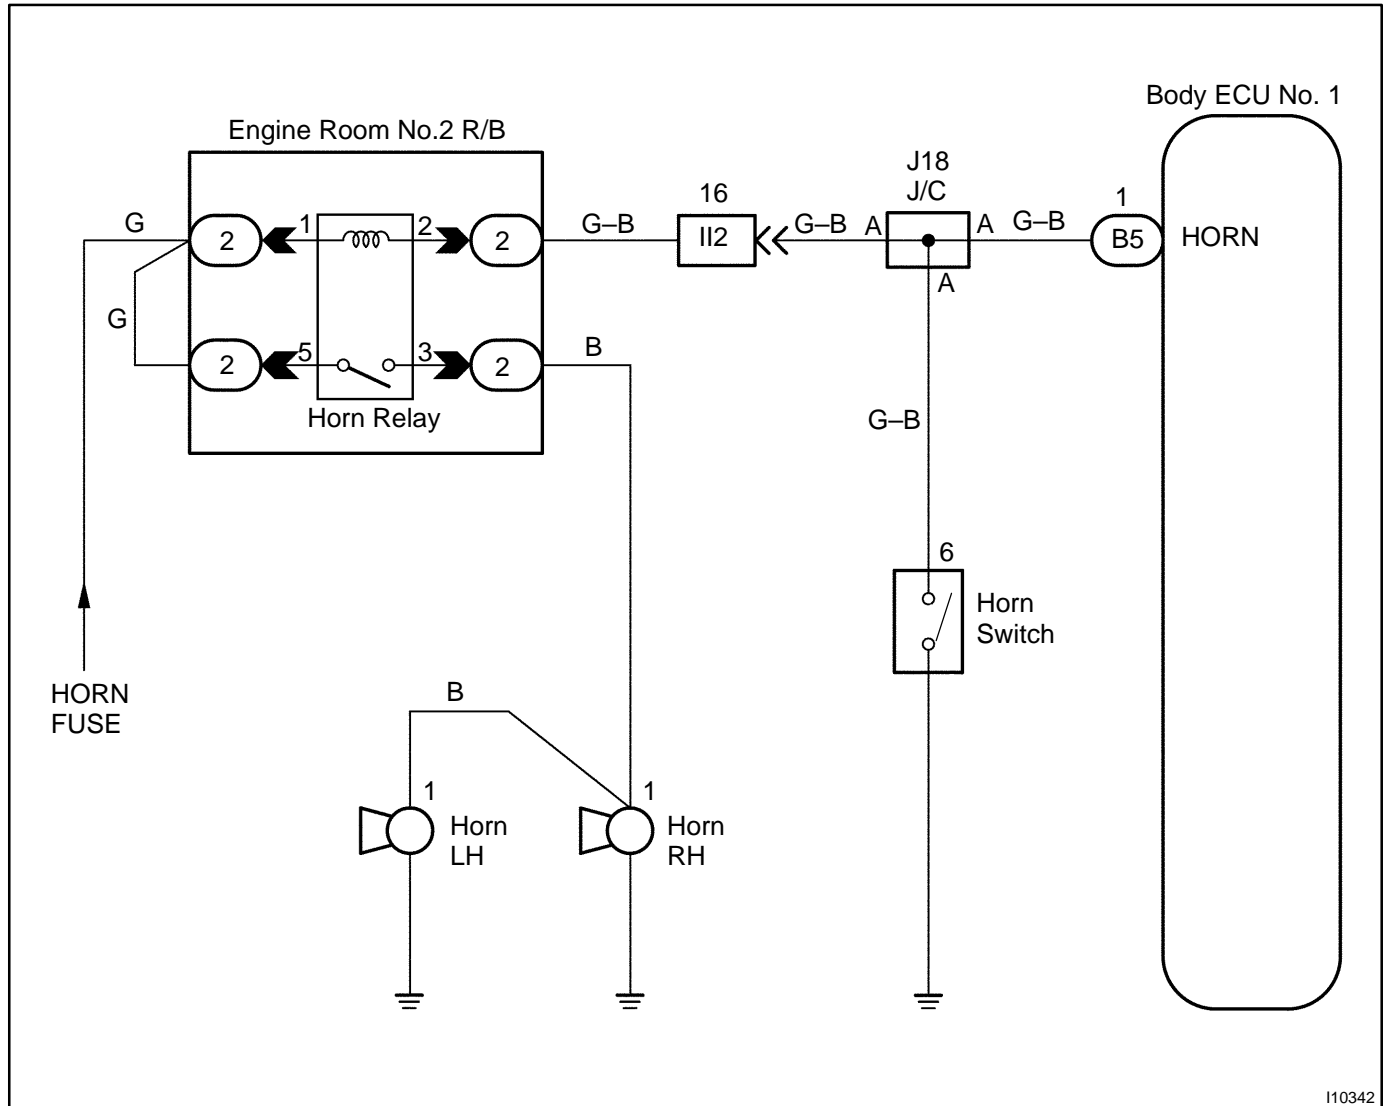

I10342

INSPECTION PROCEDURE

1	Check horn. (See page BE-257)
----------	--

NG**Replace the horn.****OK**

2	Check wireharness and connector between horn relay and body ECU No. 1, battery and horn relay.
----------	---

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))**