


## Luggage compartment door lock and unlock switch circuit

### CIRCUIT DESCRIPTION

The luggage compartment door lock and unlock switch goes on when the luggage compartment door key cylinder is turned to the unlock side with the key.

### WIRING DIAGRAM

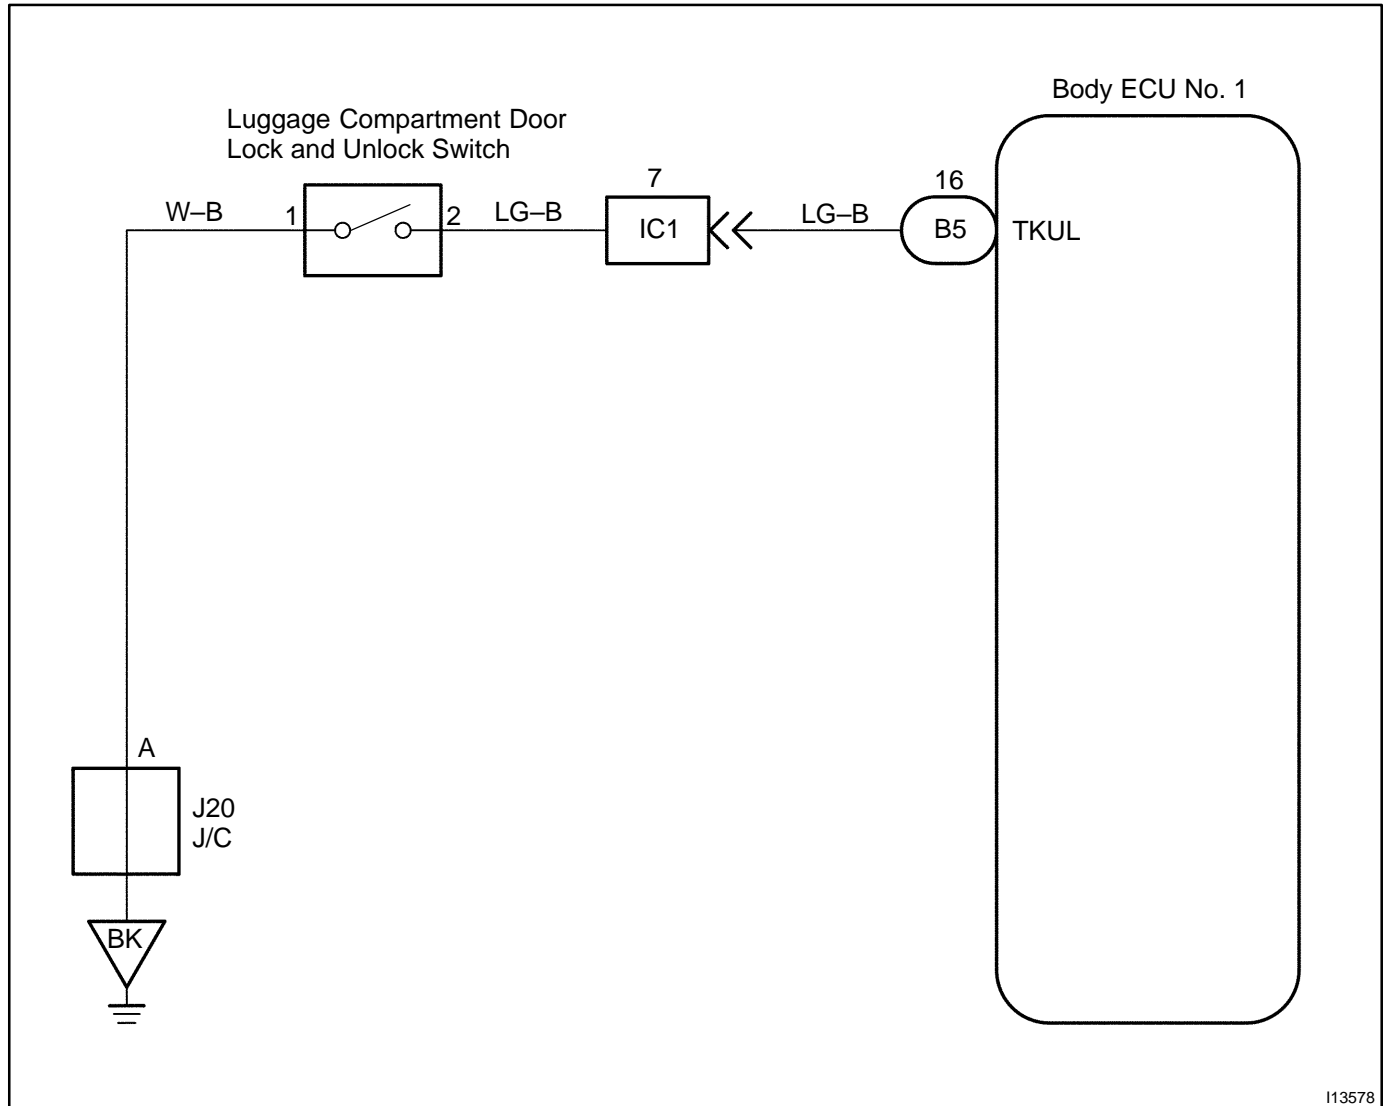

I13578

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check luggage compartment door lock and unlock switch using LEXUS hand-held tester.
---	---

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

### CHECK:

Check the luggage compartment door lock and unlock switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-931](#)).

NG

2	Check luggage compartment door lock and unlock switch (See page <a href="#">BE-148</a> ).
---	---

NG

Replace the luggage compartment door lock and unlock switch.

OK

3	Check wireharness and connector between luggage compartment door lock and unlock switch and Body ECU No. 1.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-931](#))