


Luggage opener switch circuit

WIRING DIAGRAM

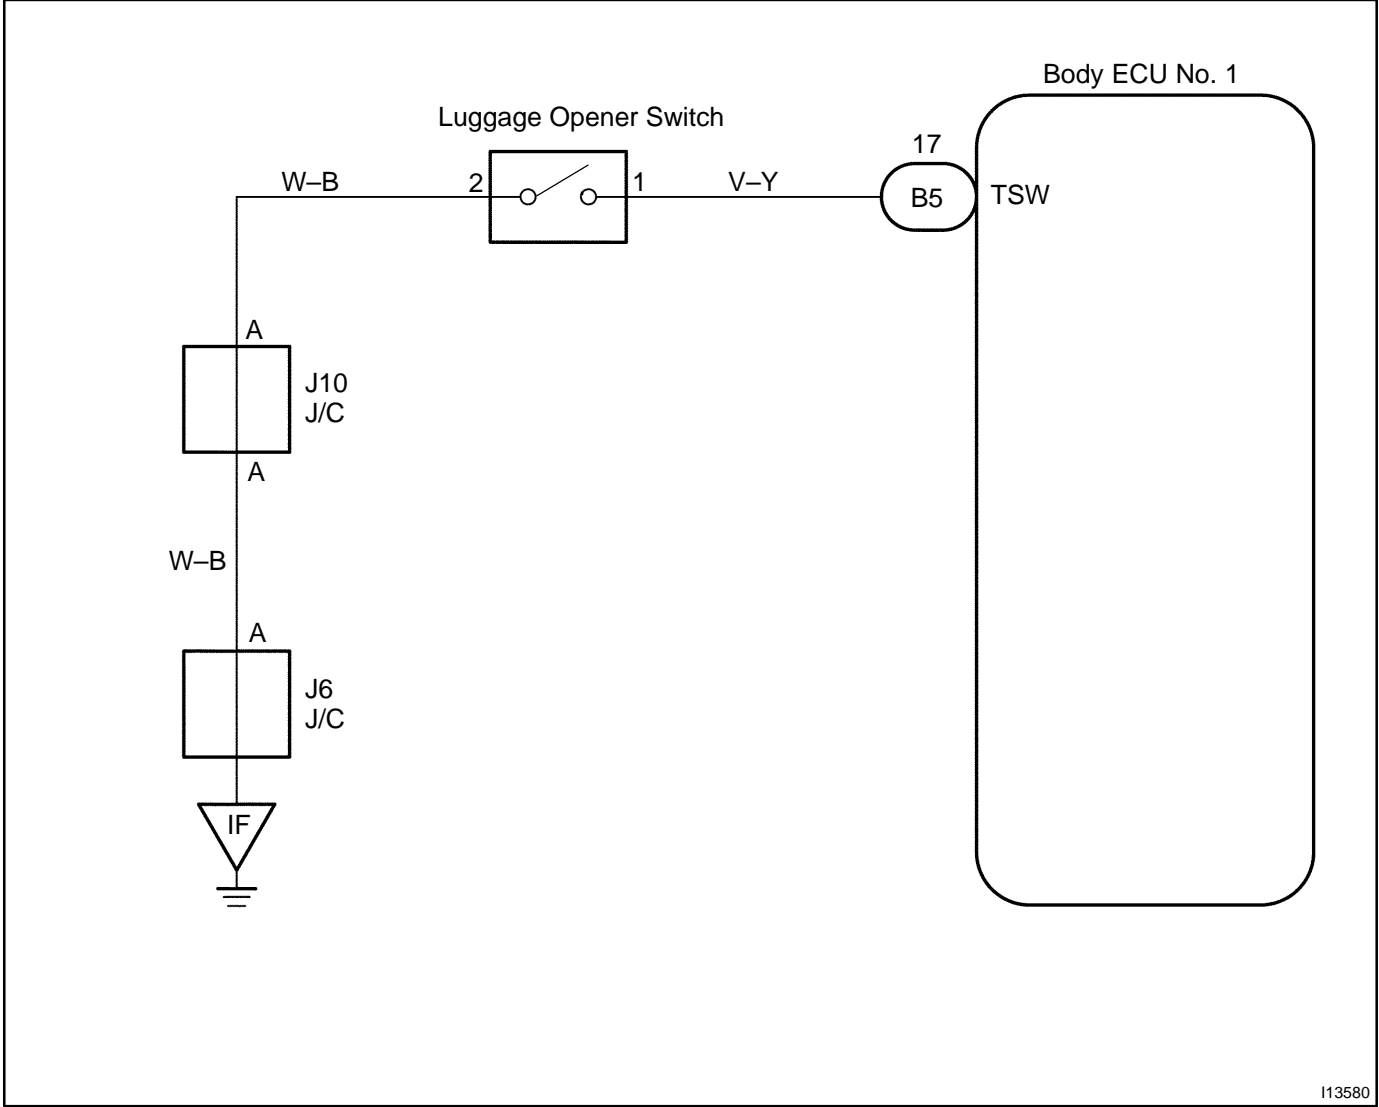

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check wiper control switch using LEXUS hand-held tester.
---	----------------------------------------------------------

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check the luggage opener switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table.(See page [DI-931](#))

NG

2	Check luggage opener switch and main switch.(See page BE-134)
---	--------------------------------------------------------------------------------

NG

Replace the luggage opener switch and main switch.

OK

3	Check wireharness and connector between luggage opener switch and Body ECU No. 1.
---	-----------------------------------------------------------------------------------

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))