


## Luggage courtesy switch circuit

### CIRCUIT DESCRIPTION

The luggage courtesy switch goes on when luggage compartment door is opened and goes off when luggage compartment door is closed.

### WIRING DIAGRAM

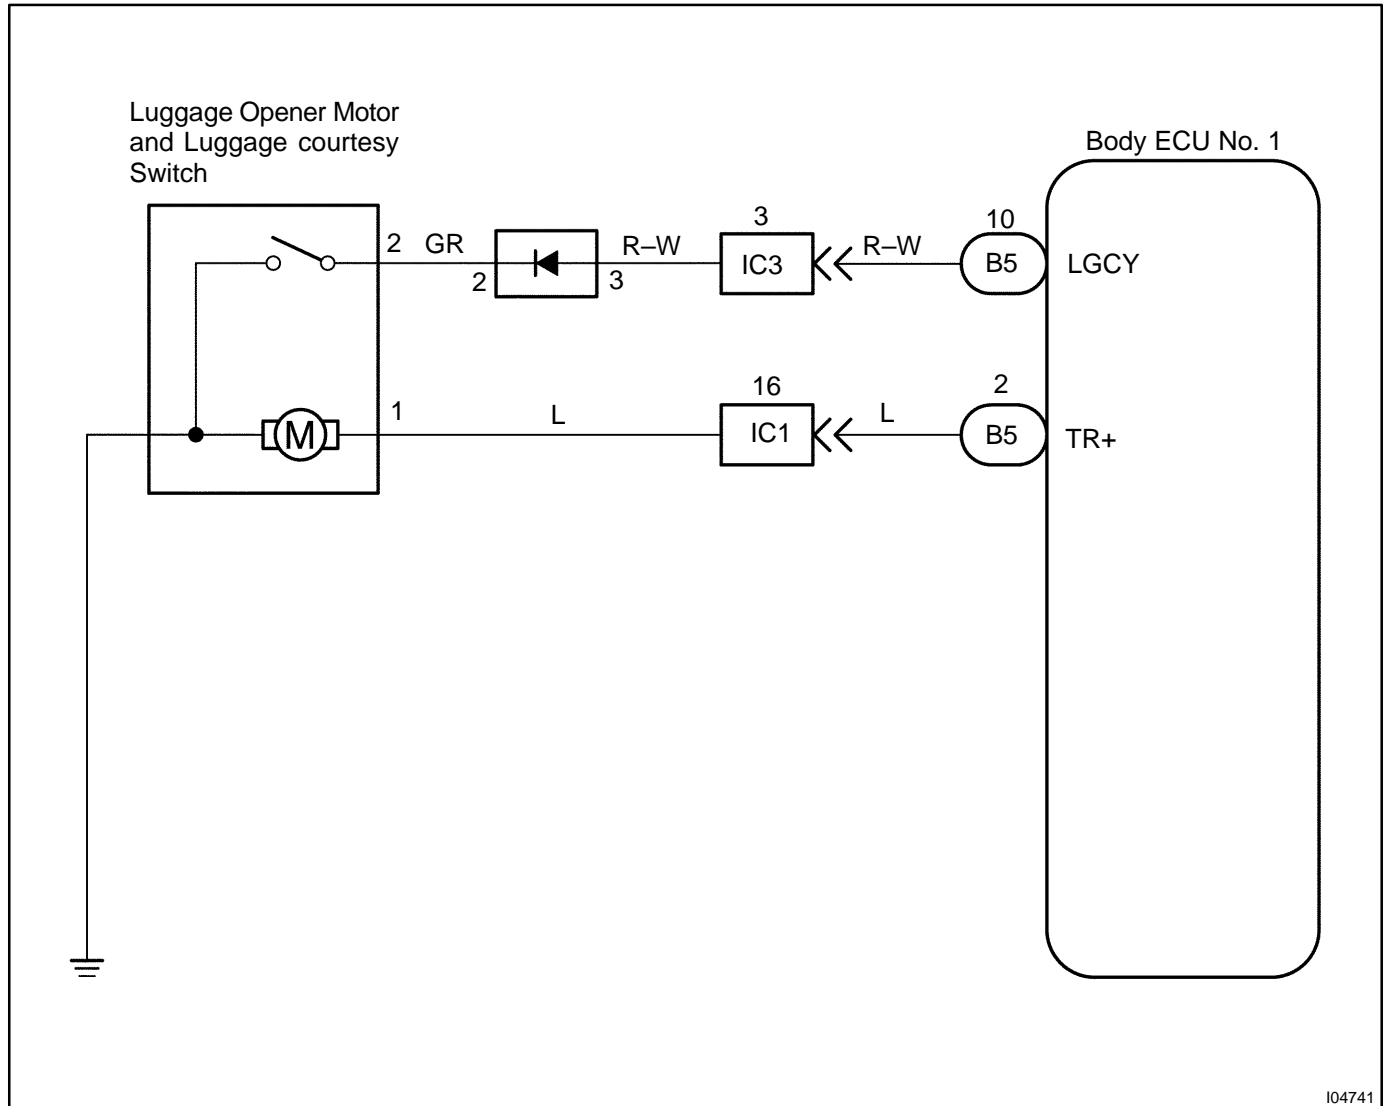

I04741

## INSPECTION PROCEDURE

### HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check luggage courtesy switch using LEXUS hand-held tester.
---	---

### PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

### CHECK:

Check the luggage courtesy switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-931](#)).

NG

2	Check luggage courtesy switch (See page <a href="#">BE-61</a> ).
---	--

NG

Replace the luggage courtesy switch.

OK

3	Check wireharness and connector between luggage courtesy switch and Body ECU No. 1.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.  
(See page [DI-943](#))