


Pattern select switch circuit

CIRCUIT DESCRIPTION

Body ECU No.1 detect the state of pattern select switch.

WIRING DIAGRAM

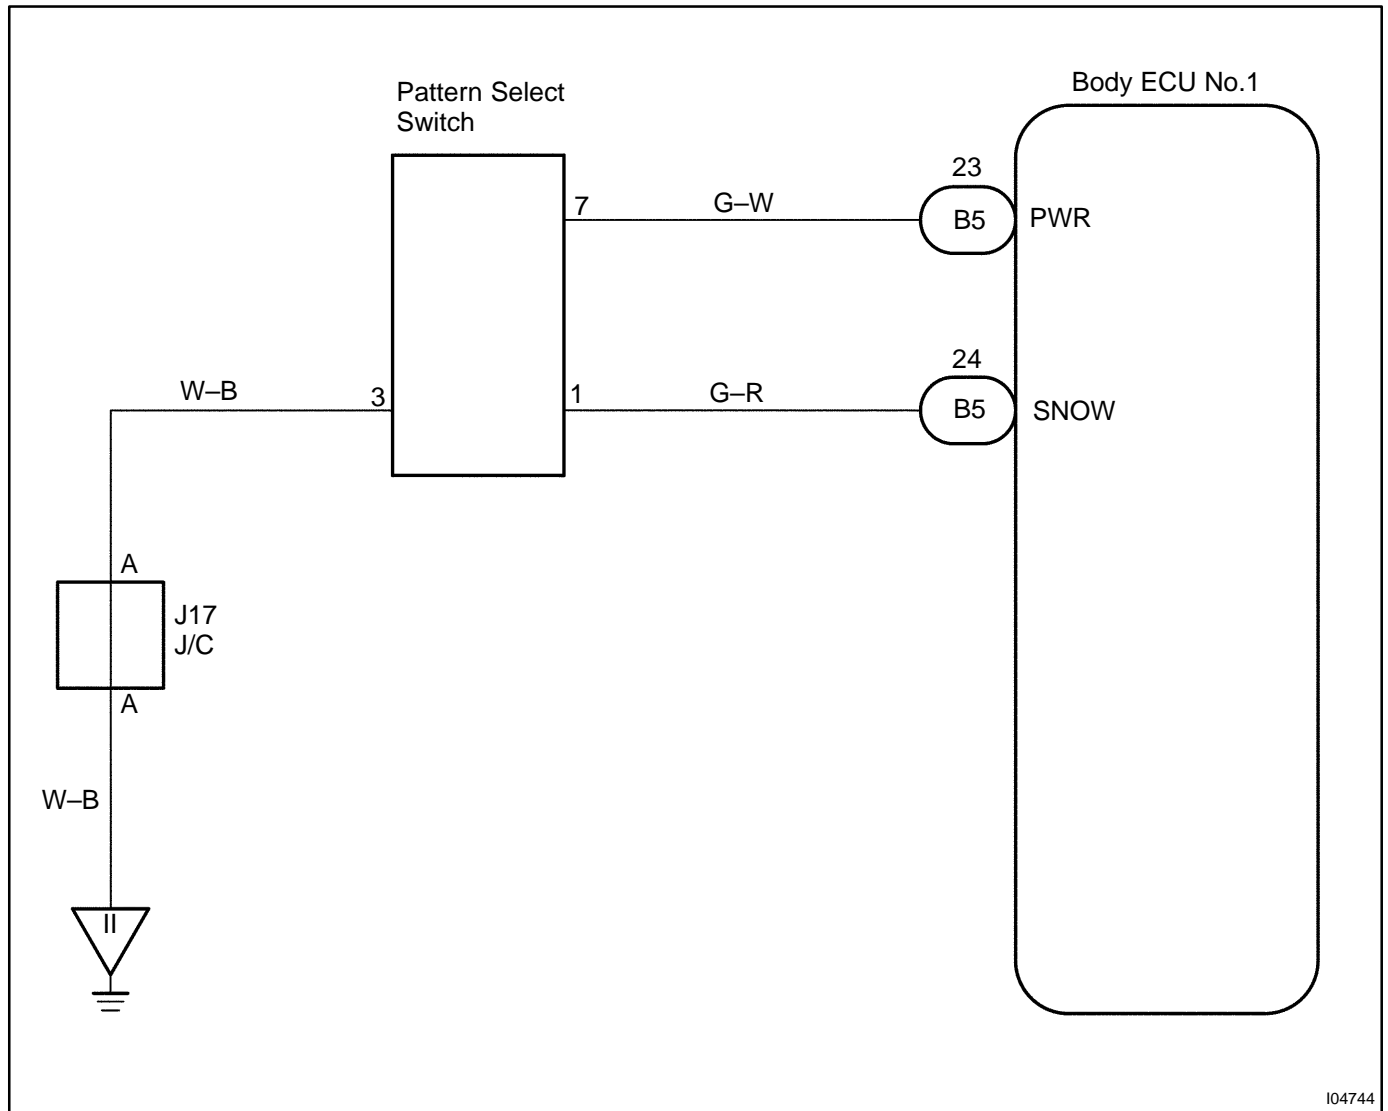

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check pattern select switch using LEXUS hand-held tester.
---	---

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check the pattern select switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-362](#) and [DI-433](#)).

NG

2	Check pattern select switch (See page DI-406 and DI-477).
---	--

NG

Replace the pattern select switch.

OK

3	Check wireharness and connector between pattern select switch and body ECU No.1.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table (See page [DI-362](#) and [DI-433](#)).