


Rear defogger relay circuit

WIRING DIAGRAM

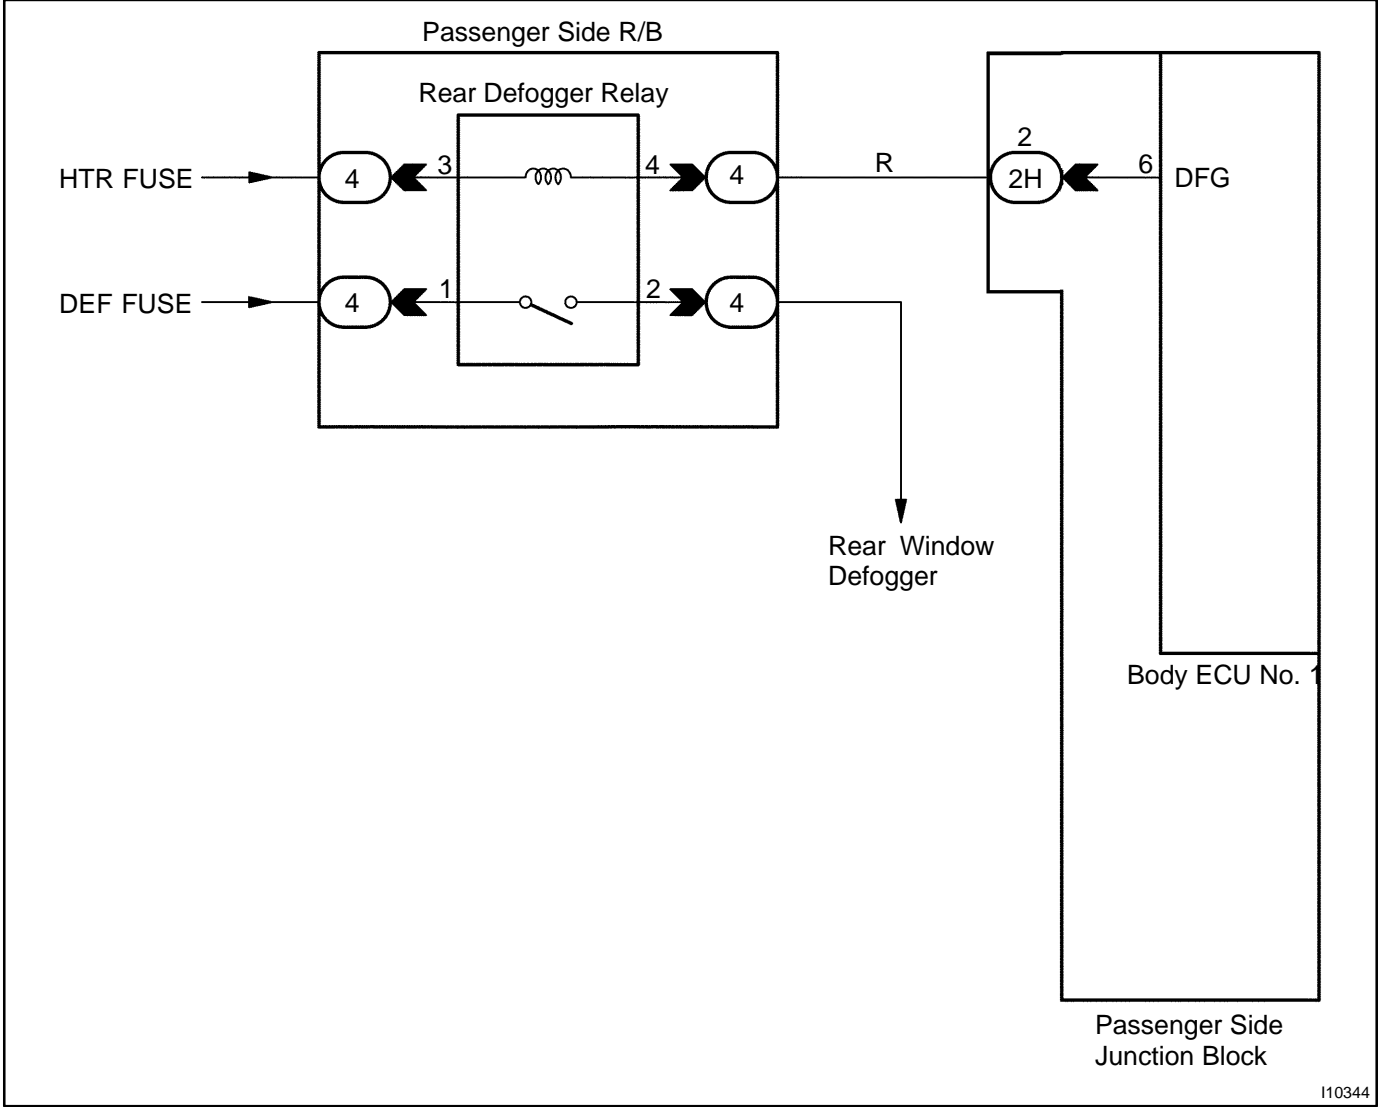

INSPECTION PROCEDURE

1	Check rear defogger relay. (See page BE-114)
----------	---

NG**Replace the rear defogger relay.****OK**

2	Check wireharness and connector between rear defogger relay and Body ECU No. 1.
----------	--

NG**Repair or replace wireharness or connector.****OK**

**Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))**