


Theft deterrent horn circuit

CIRCUIT DESCRIPTION

During warning of the theft deterrent system, the Body ECU No. 1 activates the theft deterrent horn.

WIRING DIAGRAM

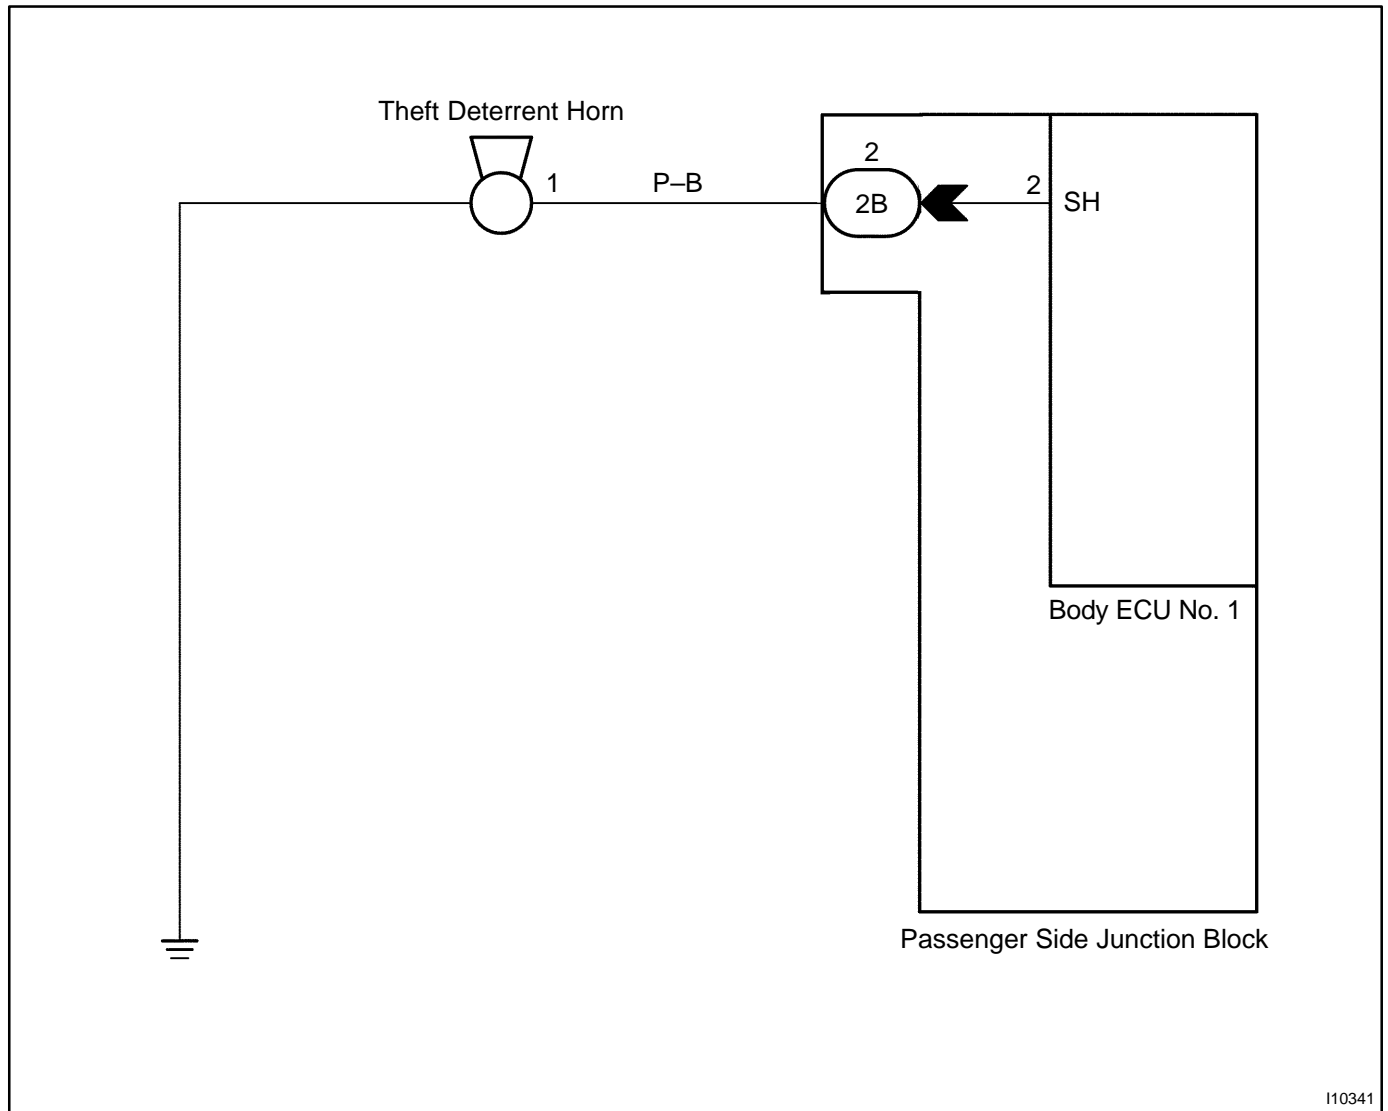

I10341

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check theft deterrent horn using LEXUS hand-held tester.
---	--

PREPARATION:

- (a) Connect the LEXUS hand-held tester to the DLC 3.
- (b) Connect terminals Tc and E1 of DLC1.

CHECK:

Check that the theft deterrent horn sounds using ACTIVE TEST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-931](#))

NG

2	Check theft deterrent horn. (See page BE-148)
---	--

NG

Replace the theft deterrent horn.

OK

3	Check wireharness and connector between theft deterrent horn and Body ECU No. 1.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-931](#))