


Clock circuit

CIRCUIT DESCRIPTION

Body ECU No. 2 will send the light deterioration signal to the clock and deteriorate the light.

WIRING DIAGRAM

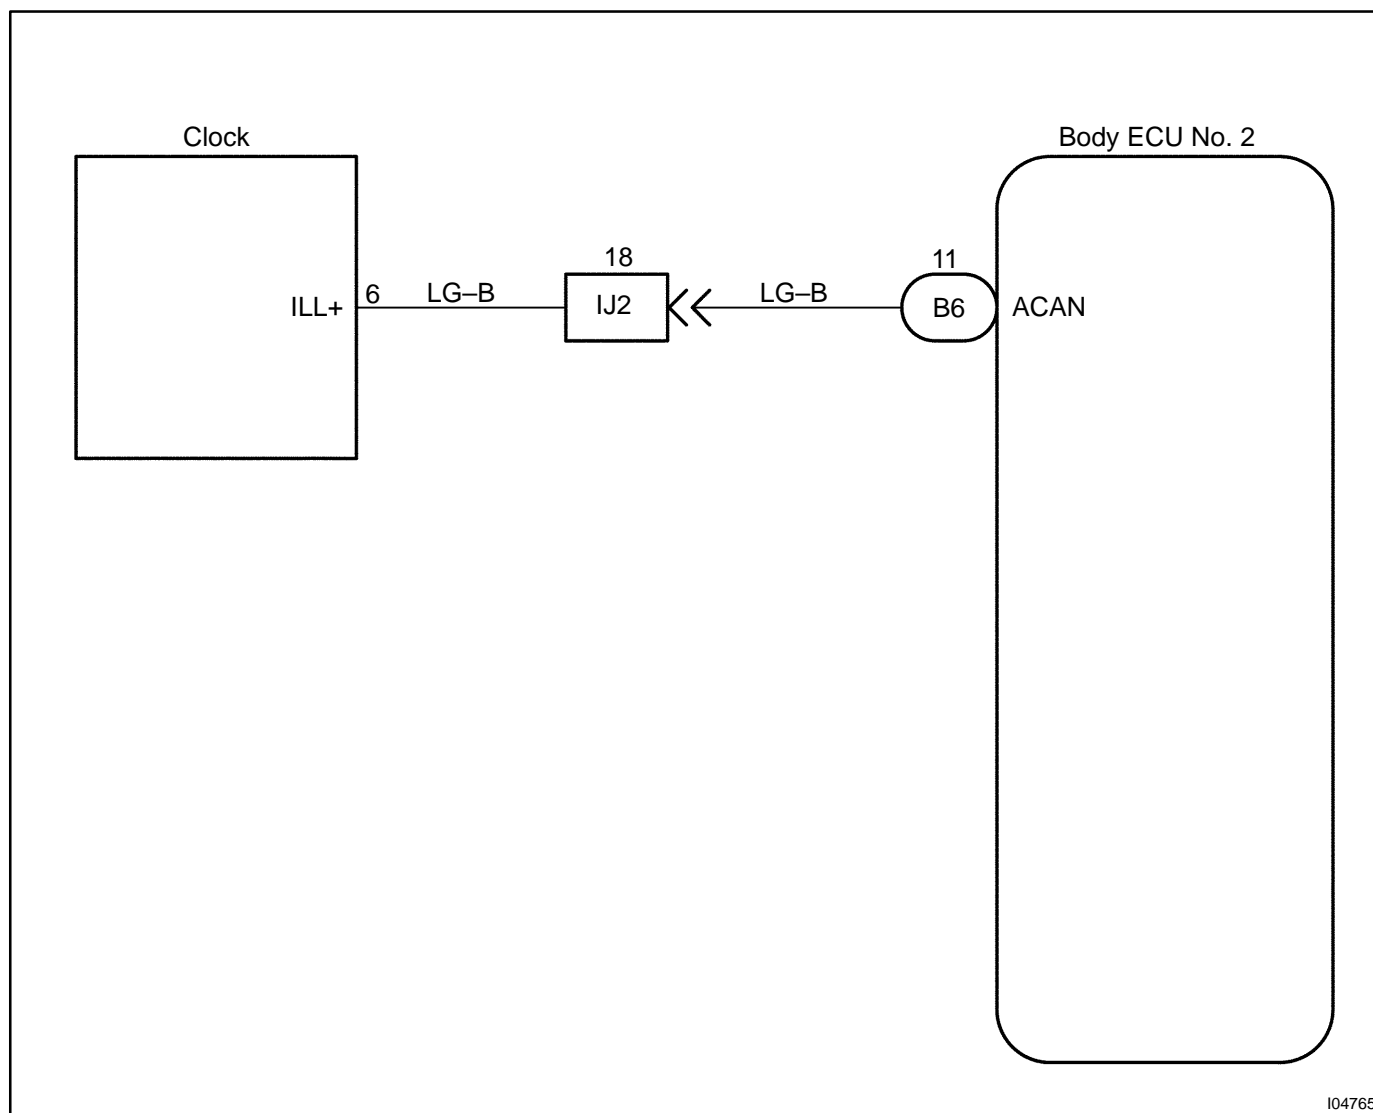

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check clock using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check that the clock will deteriorate its light in an ACTIVE TEST.

OK:

Clock must be deteriorate.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-977](#))

NG

2	Check the clock. (See page BE-234)
---	---

NG

Replace the clock.

OK

3	Check wireharness and connector between clock and Body ECU No. 2, battery and clock.
---	---

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-977](#))