


Driver buckle switch circuit

WIRING DIAGRAM

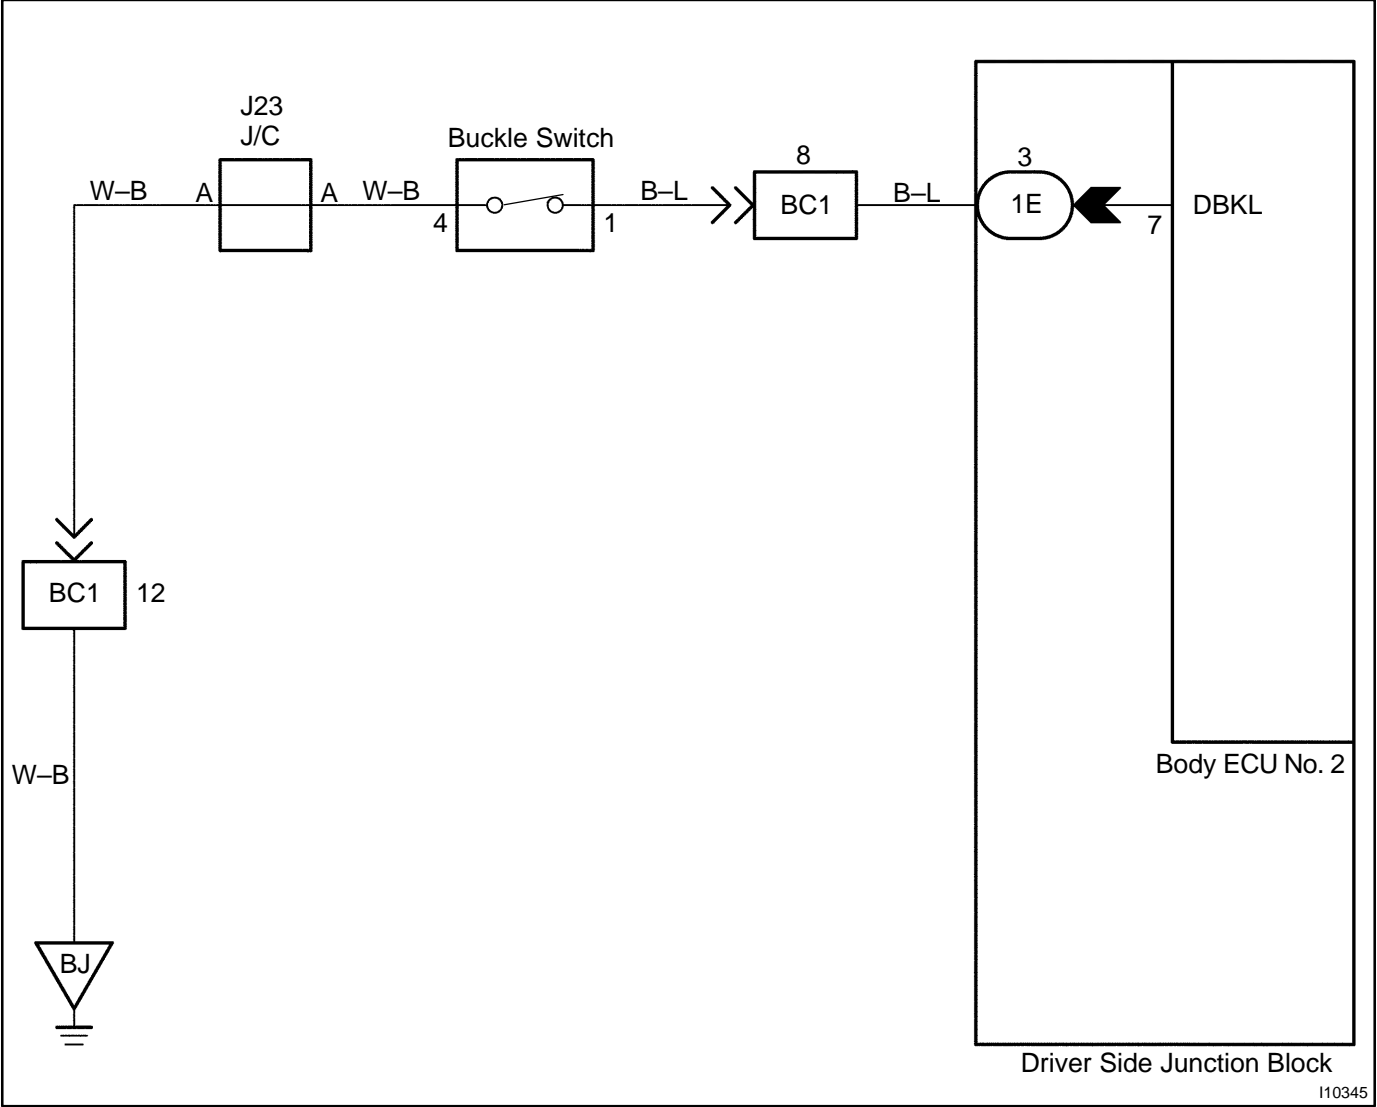

INSPECTION PROCEDURE

HINT:

In case of using the LEXUS hand-held tester, start the inspection from step 1 and in case of not using the LEXUS hand-held tester, start from step 2.

1	Check driver buckle switch using LEXUS hand-held tester.
---	--

PREPARATION:

Connect the LEXUS hand-held tester to the DLC 3.

CHECK:

Check the driver buckle switch using DATA LIST.

OK

Proceed to next circuit inspection shown on problem symptoms table. (See page [DI-977](#))

NG

2	Check driver buckle switch (See page BE-93)
---	--

NG

Replace the driver buckle switch.

OK

3	Check wireharness and connector between driver buckle switch and body ECU No. 2.
---	--

NG

Repair or replace wireharness or connector.

OK

Proceed to next circuit inspection shown on problem symptoms table.
(See page [DI-977](#))